



TCT101-3ABC USER MANUAL

PIXSYS www.pixsys.net
e-mail: sales@pixsys.net - support@pixsys.net
Software V 2.06
2300.10.139-RevH 060513



INTRODUCTION

Thanks for choosing a Pixsys device.

Tachometer TCT101 allows to read the frequency (max 100KHz) of a signal from single or double (bidirectional encoder) input.

2 universal digital inputs are available (NPN/PNP/Potential free contact) for external commands like output activation or Hold/ Stop current visualization; one input it is also analogue in order to allow setpoint modification by external potentiometers.

TECHNICAL DATA

Operating temperature Operating temperature 0-40°C, humidity 35..95uR%

Sealing Front panel IP65 (with optional gasket), Box IP30, Terminal blocks IP20

Material PC ABS UL94V0 self-extinguishing

Digital Inputs 3PNP/NPN configurable as analogue for potentiometers.
Inputs (max 28 Vdc in PNP mode)

Outputs 2 relays 5A resistive charge
OUT 24V 30mA(24Vac),40mA(24 Vdc),60mA (110...230Vac)

Back-UP Rechargeable battery, approx. 7days autonomy


Programming Software Labsoftview 2.6 or later

Power Supply 24...230Vac/Vdc +/-15% 50/60Hz / 2W

LED MEANING

	Report the activation of Q1
	Report the activation of Q2
	Report serial transmission by the TCT101

SIZE AND INSTALLATION

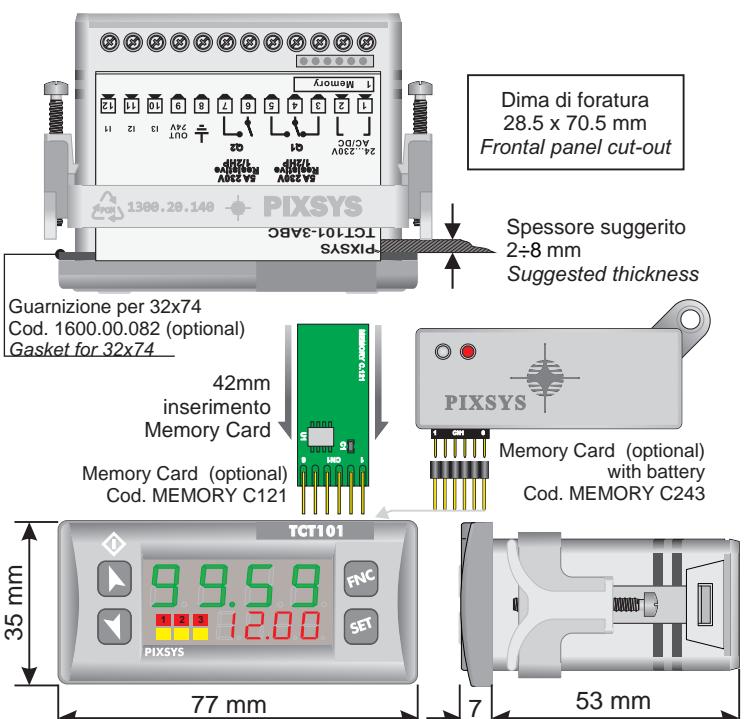


! Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.

Disconnect power supply before proceeding to hardware settings or electrical wirings.

Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual.

Do not dispose electric tools together with household waste materials in observance of European Directive 2002/96/CE

WIRING DIAGRAM

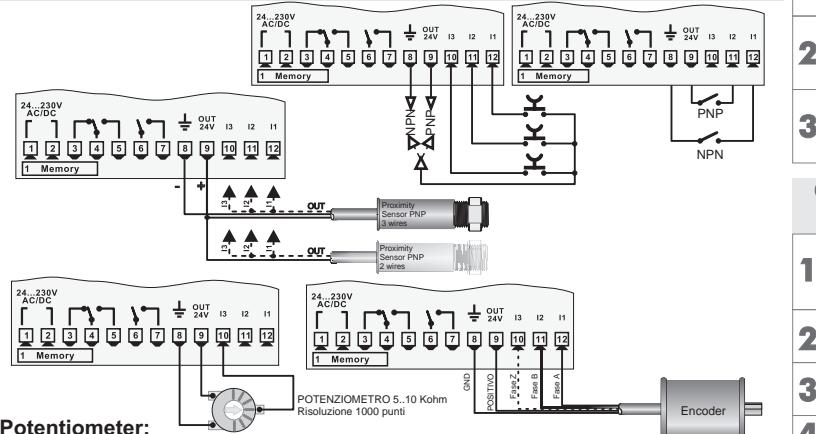

Potentiometer:

To modify Set1 or Set2 by external potentiometer follow the steps below:

- 1- use potentiometers 5kOhm to 10kohm
- 2- connect cursor to pin I3; a wrong connection may damage the potentiometer and lead to lock of the device.
- 3- accuracy on input is max 1000 points, therefore set the parameters "Upper limit" and "Lower limit" with a max difference of 1000 units.
- (Ex.: LoS1 to 50,0 and uPS1 to 150,0 to modify time value related to Set1 between 50 and 150 seconds with steps of one tenth). Greater differences would make unstable the less significant digit.

4- To calibrate the scale of potentiometer enter the configuration mode and select:

Hin.3 as Pot Fin.3 as Set1 or Set2 P.tAr as Enable

Exit configuration mode and place potentiometer at minimum level and press **SET** key, then place potentiometer at max level and press premere **SET** key: the device automatically exit the calibration procedure.

N.B.: A switch-off of the device would interrupt the calibration.

MEMORY CARD (optional)

Parameters and setpoint values can be copied from one device to another using the Memory car.

There are two methods:

> **With the device connected to the power supply**
insert the memory card **when the controller is off**.

On activation display 1 shows and display 2 shows **---**

(Only if the values stored on Mmeory Card are correct).

By pressing the **SET** key display 2 shows **Load**

Confirm using the **SET** key .

The device loads the new data and starts again.

> **With the controller disconnected from the power supply**.

The memory card is equipped with an internal battery with a life of about 1000 uses.

Insert the memory card and press the programming button.

When writing the parameters, the LED turns red and on completing the procedure it changes to green. It is possible to repeat the procedure.

UPDATING MEMORY CARD.

To update the memory card values, follow the procedure described in the first method, setting display 2 to **---** so as not to load the parameters on controller.

Enter configuration and **change at least one parameter**.

Exit configuration. Changes are saved automatically.

MAXIMUM AND MINIMUM PEAK FUNCTION

PRESS DISPLAY

- 1 **SET** If enabled maximum peak function, maximum peak value obtained is visualized.
- 2 **SET** If enabled minimum peak function, minimum peak value obtained is visualized.
- 3 **SET** and **SET** If enabled peak function, minimum and maximum peak value will initialize to current timer value.

SETPOINT MODIFICATION

PRESS

Visualizes SETPOINT 1 / 2

DISPLAY

Modifies selected SET

2a

Selects chosen digit

3a

Modifies blinking digit of selected SET

LOADING DEFAULT SETTINGS

PRESS

Display 1 shows **----** with 1st digit blinking, while Display 2 shows **PASS**

DO

Enter password **9999**

2

Modify blinking digit, pass to the next digit pressing **SET**

3

The device loads default settings

Switch the device off and restart it

CONFIGURATION PARAMETER MODIFICATION

PRESS

Display 1 shows **----** with 1st digit blinking, while Display 2 shows **PASS**

DISPLAY

Enter password **1234**

DO

Display shows first parameter of configuration table **Func**

4

Scroll parameters

5

Increase or decrease value on display pressing **SET** and an arrow key Enter the new data that will be stored when releasing the keys

6

End of configuration, the device exits from programming mode.

PARAMETERS LIST

CLOCK INPUT CONFIGURATION

CL.in P-01 Clock Input Input signal selection

I1 Input signal on I1 Default

Enc Encoder Input signal on I1 and I2 (bidirectional encoder)

INPUT CONFIGURATION

H.in P-02 Hardware input 1 Input 1 hardware configuration

H.ind P-03 Hardware input 2 Input 2 hardware configuration

H.ind P-04 Hardware input 3 Input 3 hardware configuration

NPN NPN NPN (not available on input 3) Default

PNP PNP PNP

ECL TTL TTL

Pot Potent. Potentiometer (available only for input 3)

FILTRE INPUT 1

FIL P-05 Filtre Input 1 Input 1 hardware filter configuration

Off Off Input hardware filter disabled Default

On On Input hardware filter enabled (22nF)

P-06 ACTIVE STATE INPUT 2

A.ind P-06 Active State Input 2 Input 2 active state

HLeu High Level High level Default

LLLeu Low Level Low level

P-07 ACTIVE STATE INPUT 3

A.ind P-07 Active State Input 3 Input 3 active state

HLeu High Level High level

LLLeu Low Level Low level

F-08 FUNCTION INPUT 2

F.ind P-08 Function Input 2 Function associated to Input 2

F-09 FUNCTION INPUT 3

F.ind P-09 Function Input 3 Function associated to Input 3

d.S Disable Disabled Default

out Out Enable/Disable Enable / Disable tachometer outputs

Hold Hold (only for I3) Hold visualized tachometer value

Set1 Set1 (only for I3) Set1 setting by potentiometer

Set2 Set2 (only for I3) Set2 setting by potentiometer

P-10 POTENTIOM. TARATURE

Pear P-10 Potentiom. Tarature Potentiometer calibration procedure

d.S Disable Disabled Default

En Enable Enabled

P-11 FUNCTION KEY UP

FUp P-11 Function Key UP Function associated to key UP (up arrow)

d.S Disable Disabled Default

NAHP Display max peak Max. registered peak visualization (reset by UP+DOWN key)

P-12 FUNCTION KEY DOWN

FDdo P-12 Function Key DOWN Function associated to key DOWN (down arrow)

d.S Disable Disabled Default

NAHP Display min peak Min. registered peak visualization (reset by UP+DOWN key)

BACKUP MEMORY CONFIGURATION

PoME P-13 Power-off Memory Power-off memory

d.S Disable No peak value stored at switch-off Default

Min Peak Min Peak Minimum peak value stored at switch-off

Max Peak Max Peak Maximum peak value stored at switch-off

All Peak All Peak Max. and Min. peak values stored at switch-off

CLOCK INPUT CONFIGURATION

inF P-14 Minimum Input Frequency Lower frequency visualized

For lower frequency values 0 is visualized on display. This parameter forces max. refresh time of display

from 100 to 0.1 sec.

Default

0.01 0.01 Hz


For lower frequency values 0 is visualized on display. This parameter forces max. refresh time of display

from 100 to 0.1 sec.

Default

0.09 0.09 Hz

TCT101-3ABC "TACHOMETER"

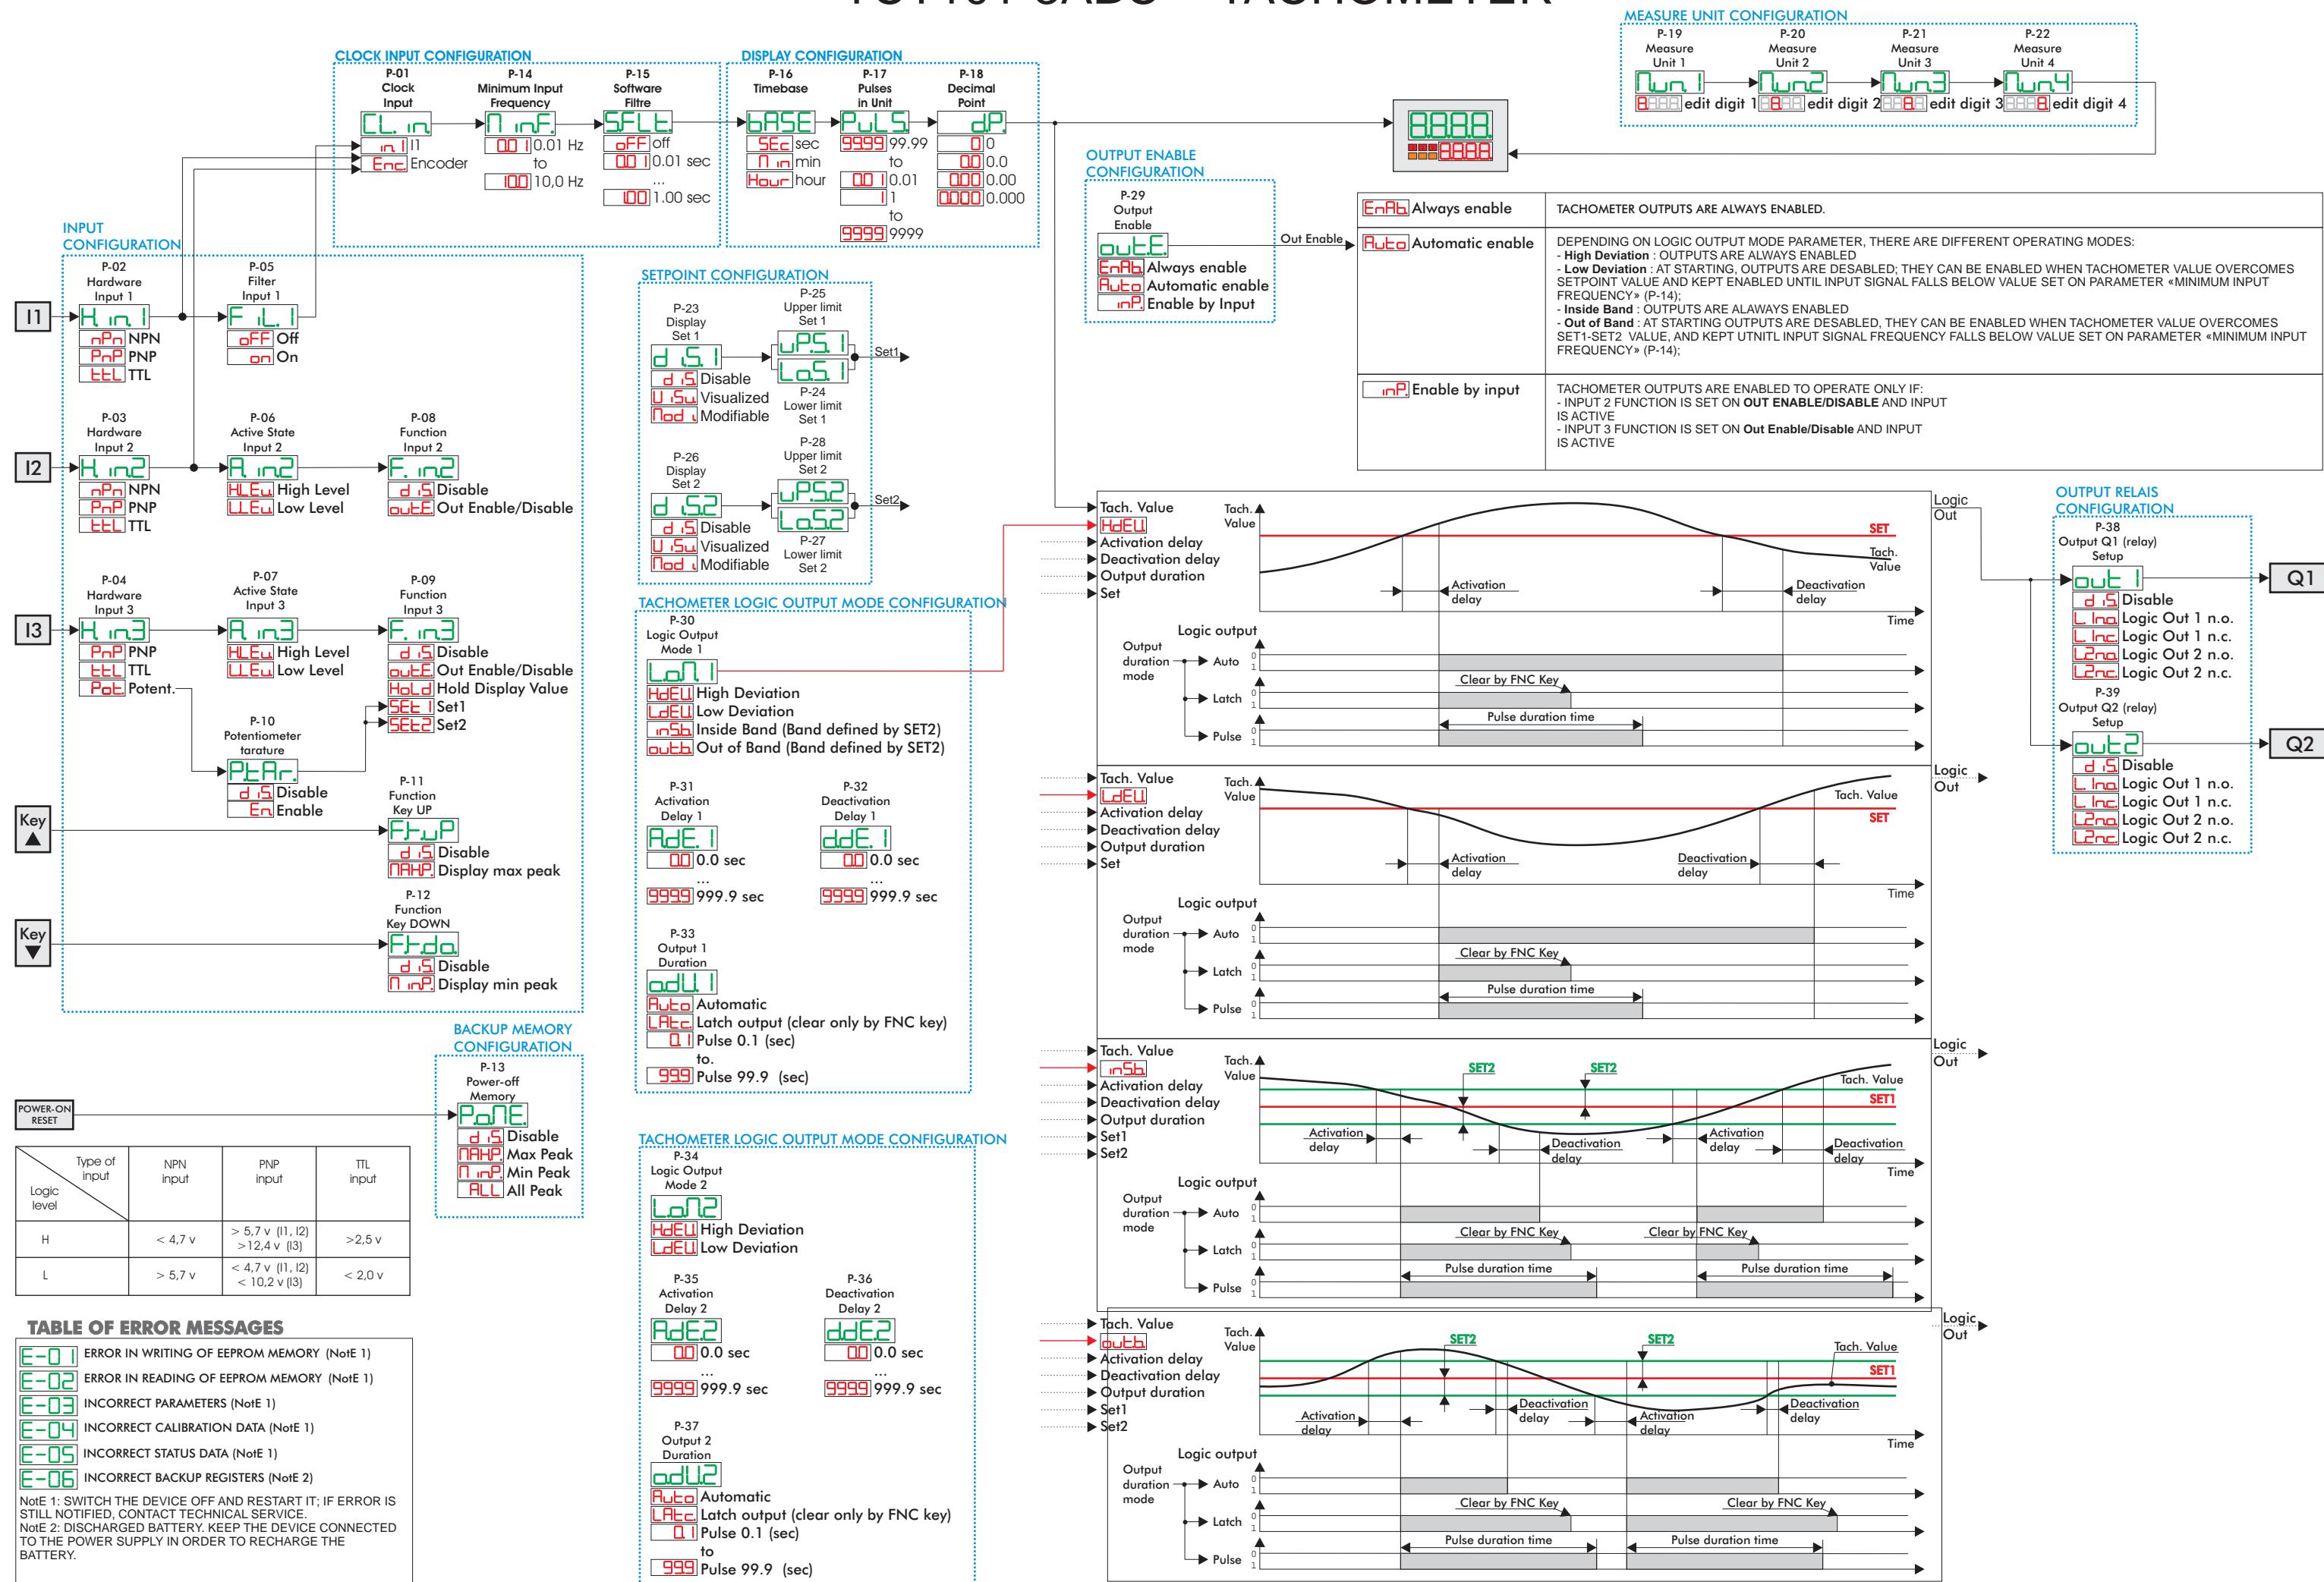




TCT101-4ABC-T USER MANUAL

PIXSYS www.pixsys.net
e-mail: sales@pixsys.net - support@pixsys.net
Software V 2.08
2300.10.140-RevH 240314

SIZE AND INSTALLATION

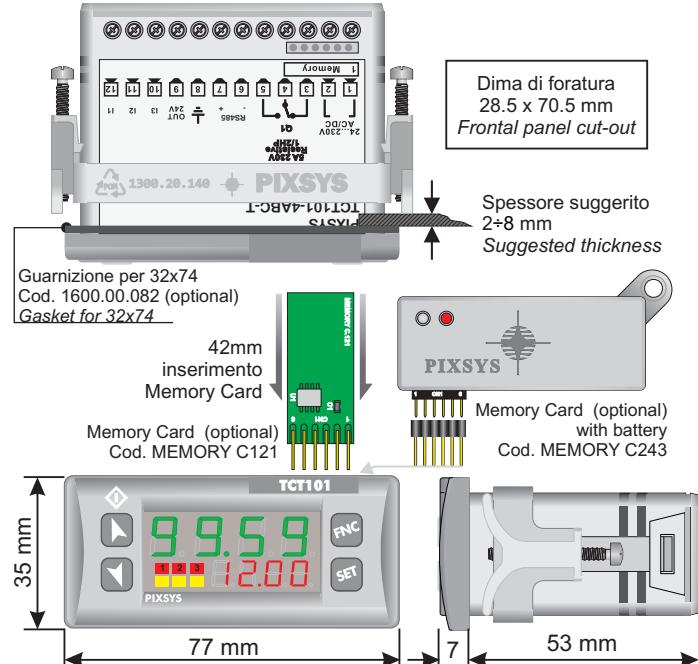

LED	MEANING
	Report the activation of Q1
	Report the activation of Q2
	Report serial transmission by the TCT101

TECHNICAL DATA

Operating temperature	Operating temperature 0-40°C, humidity 35..95uR%
Sealing	Front panel IP65 (with optional gasket), Box IP30, Terminal blocks IP20
Material	PC ABS UL94V0 self-extinguishing
Digital Inputs	3PNP/NPN configurable as analogue for potentiometers. (max 28 Vdc in PNP mode)
Outputs	1 relays 5A resistive charge OUT 24V 30mA(24Vac),40mA(24 Vdc),60mA (110...230Vac)
Serial	RS485
Back-UP	Rechargeable battery, approx. 7days autonomy
Programming	Labsoftview 2.6 or later
Software	
Power Supply	24...230Vac/Vdc +/-15% 50/60Hz / 2W

INTRODUCTION

Thanks for choosing a Pixsys device. TCT101-4ABC-T can be set in 3 different modes: **timer**, **counter** or **tachometer**. 3 universal digital inputs are available (NPN/PNP/Potential free contact) and can be used for reading external switches, proximity sensors and bidirectional encoders. One input is also analogue in order to allow setpoint modification by external potentiometer. Rs485 serial interface allows communication via Modbus RTU protocol.




Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.

Disconnect power supply before proceeding to hardware settings or electrical wirings.

Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual.

Do not dispose electric tools together with household waste materials in observance of European Directive 2002/96/CE

WIRING DIAGRAM

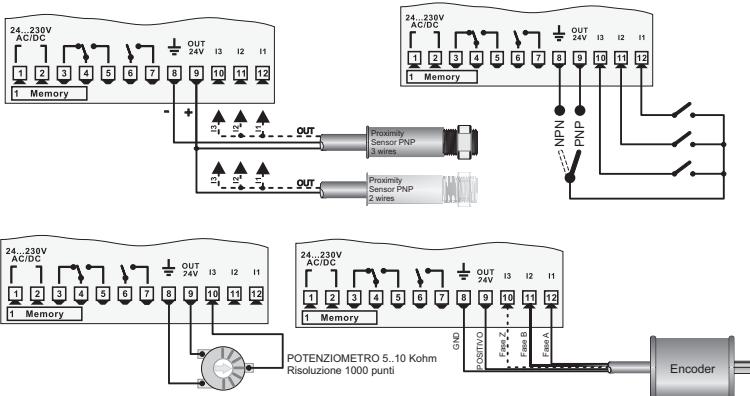

Potentiometer:

To modify Set1 or Set2 by external potentiometer follow the steps below:

- 1-use potentiometers 5kOhm to 10kOhm
- 2-connect cursor to pin I3; a wrong connection may damage the potentiometer and lead to lock of the device.
- 3-accuracy on input is max 1000 points, therefore set the parameters "Upper limit" and "Lower limit" with a max difference of 1000 units.
(Ex.: LoS1 to 50,0 and uPS1 to 150,0 to modify time value related to Set1 between 50 and 150 seconds with steps of one tenth). Greater differences would make unstable the less significant digit.
- 4-To calibrate the scale of potentiometer enter the configuration mode and select: Hin.3 as Pot Fin.3 as Set1 or Set2 P.tAr as Enable
Exit configuration mode and place potentiometer at minimum level and press **SET** key, then place potentiometer at max level and press **PREMERE SET** key: the device automatically exit the calibration procedure.
N.B.: A switch-off of the device would interrupt the calibration.

MEMORY CARD (optional)

Parameters and setpoint values can be copied from one device to another using the Memory card.

There are two methods:

> **With the device connected to the power supply**
insert the memory card **when the controller is off**.

On activation display 1 shows and display 2 shows **---**
(Only if the values stored on memory Card are correct).

By pressing the **SET** key display 2 shows **Load**

Confirm using the **SET** key .

The device loads the new data and starts again.

> **With the controller disconnected from the power supply:**

The memory card is equipped with an internal battery with a life of about 1000 uses.

Insert the memory card and press the programming button.

When writing the parameters, the LED turns red and on completing the procedure it changes to green. It is possible to repeat the procedure.

▲ UPDATING MEMORY CARD.

To update the memory card values, follow the procedure described in the first method, setting display 2 to **---** so as not to load the parameters on controller.

Enter configuration and **change at least one parameter**.

Exit configuration. Changes are saved automatically.

SETPOINT MODIFICATION

PRESS

1	SET	Visualizes SETPOINT 1 / 2
2	SET or SET	Modifies selected SET
2a	FNC	Selects chosen digit
3a	SET or SET	Modifies blinking digit of selected SET

DISPLAY

PRESS

1	FNC for 3 seconds	Display 1 shows 0000 with 1st digit blinking, while Display 2 shows PASS
2	SET or SET	Modify blinking digit and pass to the next one pressing SET
3	SET to confirm	Instrument loads default settings

DISPLAY

DO

CONFIGURATION PARAMETER MODIFICATION

PRESS

1	FNC for 3 seconds	Display 1 shows 0000 with 1st digit blinking, while Display 2 shows PASS
2	SET or SET	Modify blinking digit and pass to the next one pressing SET
3	SET to confirm	Display visualizes the first parameter of configuration table Func
4	SET or SET	Scroll parameters
5	SET + SET or SET	Increase or decrease visualized parameter pressing SET and an arrow key
6	FNC	Enter new data that will be saved when releasing keys
		End configuration, controller exits from configuration

DISPLAY

DO

SERIAL COMMUNICATION

TCT101-4ABC-T is provided with RS485 serial and can receive / transmit data via MODBUS RTU protocol. Device can be configured only as Slave. This function allows to control multiple controllers connected to a supervisory system (Master). Each instrument will answer to a Master query only if it contains some addresses as on parameter **SLAd** (Slave Address).

Allowed addresses range are from 1 to 254 and there should not be controllers with the same address on the same line.

Address 255 can be used by the Master to communicate with all connected equipments (all connected devices will answer Master query with this address), while with 0 all devices receive command, but no answer is expected (broadcast mode).

TCT101-4ABC-T can introduce an answer delay (in milliseconds) to Master request. This delay has to be set on parameter **SEDE** (Serial Delay).

At each parameter modification, instrument stores values in EEPROM memory (100000 writing cycles).

NB: Modifications made to Word different to those described in the following table can lead to instrument malfunction.

MODBUS RTU PROTOCOL MAIN FEATURES

Baudrate	Selectable by parameter
Format	8,N,1 (8 bit data, no parity, 1 stop bit)
Supported functions	WORD READING (0x03, 0x04) (max 20 word) SINGLE WORD WRITING (0x06) MULTIPLE WORDS WRITING (0x10) (max 20 word)
Read/Write	RO Read Only WO Write Only RW Read / Write
Reset Value	? EEPROM Valore Data unknown at reset Value stored on EEPROM Value indicated at reset

PARAMETERS LIST

TCT101-4ABC-T allows to select operating mode, modifying first configuration parameter. According to chosen mode, only the relevant parameters will be displayed.

Refer to technical notes of each mode to find parameters list.

TCT101 MODE CONFIGURATION

Node	P-00 Mode	TCT101 operating mode selection
cont	Counter	TCT101 operating as counter
Erch	Tachometer	TCT101 operating as tachometer
Time	Timer	TCT101 operating as timer Default

Here below you can find parameters to set serial port and Modbus protocol, independently from selected operating mode.

SERIAL CONFIGURATION

SLAd	P-50 Slave Address	Device Modbus address
1	Slave n°1	Modbus 1 address Default
...		
254	Slave n° 254	Modbus 254 address
bdr	P-51 Baudrate	Serial communication speed
110	110 baud	110 b/s communication
150	150 baud	150 b/s communication
300	300 baud	300 b/s communication
600	600 baud	600 b/s communication
1200	1200 baud	1200 b/s communication
2400	2400 baud	2400 b/s communication
4800	4800 baud	4800 b/s communication
9600	9600 baud	9600 b/s communication
19200	19200 baud	19200 b/s communication Default
28800	28800 baud	28800 b/s communication
38400	38400 baud	38400 b/s communication
57600	57600 baud	57600 b/s communication
FoSE	P-52 Format Serial	Serial data format
8	8 bit, parity none, 1 stop	8 data bit, no parity, 1 stop bit Default
SEDE	P-53 Serial Delay	Serial delay
0	0 ms	Slave answer after 0 ms
...		
100	100 ms	Slave answer after 100 ms Default 2ms

300	Loading default values - writing **9999** restores all default values - writing **9998** restores all default values keeping unchanged slave address - writing **9997** restores all default values keeping unchanged communication baudrate - writing **9996** restores all default values keeping unchanged slave address and communication baudrate	RO	153

</tbl_r

PARAMETERS LIST

FUNCTION CONFIGURATION

Func	P-01 Timer Function	Timer functions
ton	Timer On	Activates output at count end
toFF	Timer Off	Deactivates output at count end
PAW	Pause/Work	T1 and T2 start in sequence
osc	Oscillator	T1 and T2 start in sequence repeatedly
PUN	PWM	Percentage output activation on fixed time base

BACKUP MEMORY CONFIGURATION

func	P-02 Power-off Memory	Power-off memory
dS	Disabled	Disabled
oT	Only Timer	Only timer value in memory
ALL	Timer / State	Timer value and START/STOP status in memory

INPUT CONFIGURATION

in	P-03 Hardware Input 1	Input 1 configuration
nPN	NPN	NPN
PnP	PNP	PNP
TTL	TTL	TTL

in	P-04 Hardware Input 2	Input 2 configuration
nPN	NPN	NPN
PnP	PNP	PNP
TTL	TTL	TTL

in	P-05 Hardware Input 3	Input 3 configuration
PnP	PNP	PNP
TTL	TTL	TTL
Pat.	Potentiometer	

in	P-06 Active State Input 1	Input 1 activation
HLeu	High Level	High level
LElu	Low Level	Low level
rSi	Rising edge	Transitory in rising

in	P-07 Active State Input 2	Input 2 activation
HLeu	High Level	High level
LElu	Low Level	Low level
rSi	Rising edge	Transitory in rising

in	P-08 Active State Input 3	Input 3 activation
HLeu	High Level	High level
LElu	Low Level	Low level
rSi	Rising edge	Transitory in rising

in	P-09 Function Input 1	Input 1 function
dS	Disable	Disabled
SESE	Start / Stop	Start / Stop
SESr	Start / Stop-Reset	Start / Stop-Reset
FSSE	Reset-Start / Stop	Reset-Start / Stop
FSSr	Reset / Start / Stop	Reset / Start / Stop

in	P-10 Function Input 2	Input 2 function
dS	Disable	Disabled
rES	Reset	Reset

in	P-11 Function Input 3	Input 3 function
dS	Disable	Disabled
WE	Wait	Wait (count lock)
HoLd	Hold	Hold (lock the display but count continues)
SET1	Potent. To SET1	Variation by potentiometer on SET1
SET2	Potent. To SET2	Variation by potentiometer on SET2

in	P-12 Function Key UP	Function on key
dS	Disable	Disabled
SESE	Start / Stop	Start / Stop
SESr	Start / Stop-Reset	Start / Stop-Reset
FSSE	Reset-Start / Stop	Reset-Start / Stop
FSSr	Reset / Start / Stop	Reset / Start / Stop
rES	Reset	Reset
WE	Wait	Wait (count lock)
HoLd	Hold	Hold (lock the display but count continues)

OUTPUT CONFIGURATION

out	P-13 Output Q1 Setup	Output Q1 selection
dS	Disable	Disabled
t1n	Out Timer 1 n.o.	Timer Output 1 n.o.
t1nc	Out Timer 1 n.c.	Timer Output 1 n.c.
t2n	Out Timer 2 n.o.	Timer Output 2 n.o.
t2nc	Out Timer 2 n.c.	Timer Output 2 n.c.
StAr	Start	Start
StOp	Stop	Stop


out	P-14 Output Q2 Setup	Output Q2 selection
dS	Disable	Disabled
t1n	Out Timer 1 n.o.	Timer Output 1 n.o.
t1nc	Out Timer 1 n.c.	Timer Output 1 n.c.
t2n	Out Timer 2 n.o.	Timer Output 2 n.o.
t2nc	Out Timer 2 n.c.	Timer Output 2 n.c.
StAr	Start	Start
StOp	Stop	Stop

out	P-15 Type of Timer	Count mode
incr	Incremental	Incremental
decr	Decremental	Decremental

MODBUS WORD ADDRESSES IN TIMER MODE

Modbus Address	Description	Read Write	Reset Value
500	Timer H value	RO	?
501	Timer L value	RO	?
502	Timer value / 60	RO	?
503	Module 60 timer value	RO	?
504	Timer status - 0 timer in stop - 1,2 timer in start	RO	?
505	Active timer - 0 no active timer - 1 timer 1 active - 2 timer 2 active	RO	?
506	Timer logic outputs - bit 0 timer 1 logic output - bit 1 timer 2 logic output	RO	?
507	Wait Hold timer status - bit 0 Wait status - bit 1 Hold status	RO	?
508	Timer serial command done	RO	?
509	Timer in Hold	RO	?
510	Hold H timer value	RO	?
511	Hold L timer value	RO	?
512	Hold / 60 timer value	RO	?
513	Hold module 60 timer value	RO	?
514	Partial minutes (only for timer in hours)	RO	?
530	Timer serial command - 0 no command - 1 start timer command - 2 stop timer command - 3 reset timer command - 4 reset start timer command - 5 stop reset timer command - 6 enables/ desables wait timer function command - 7 enables/ desables hold timer command function	WO	0
1000	Parameter P-00	RW	EEPROM
1001	Parameter P-01	RW	EEPROM
1002	Parameter P-02	RW	EEPROM
	...	RW	EEPROM
1052	Parameter P-52	RW	EEPROM
1053	Parameter P-53	RW	EEPROM

TCT101-4ABC-T "TIMER" MODE

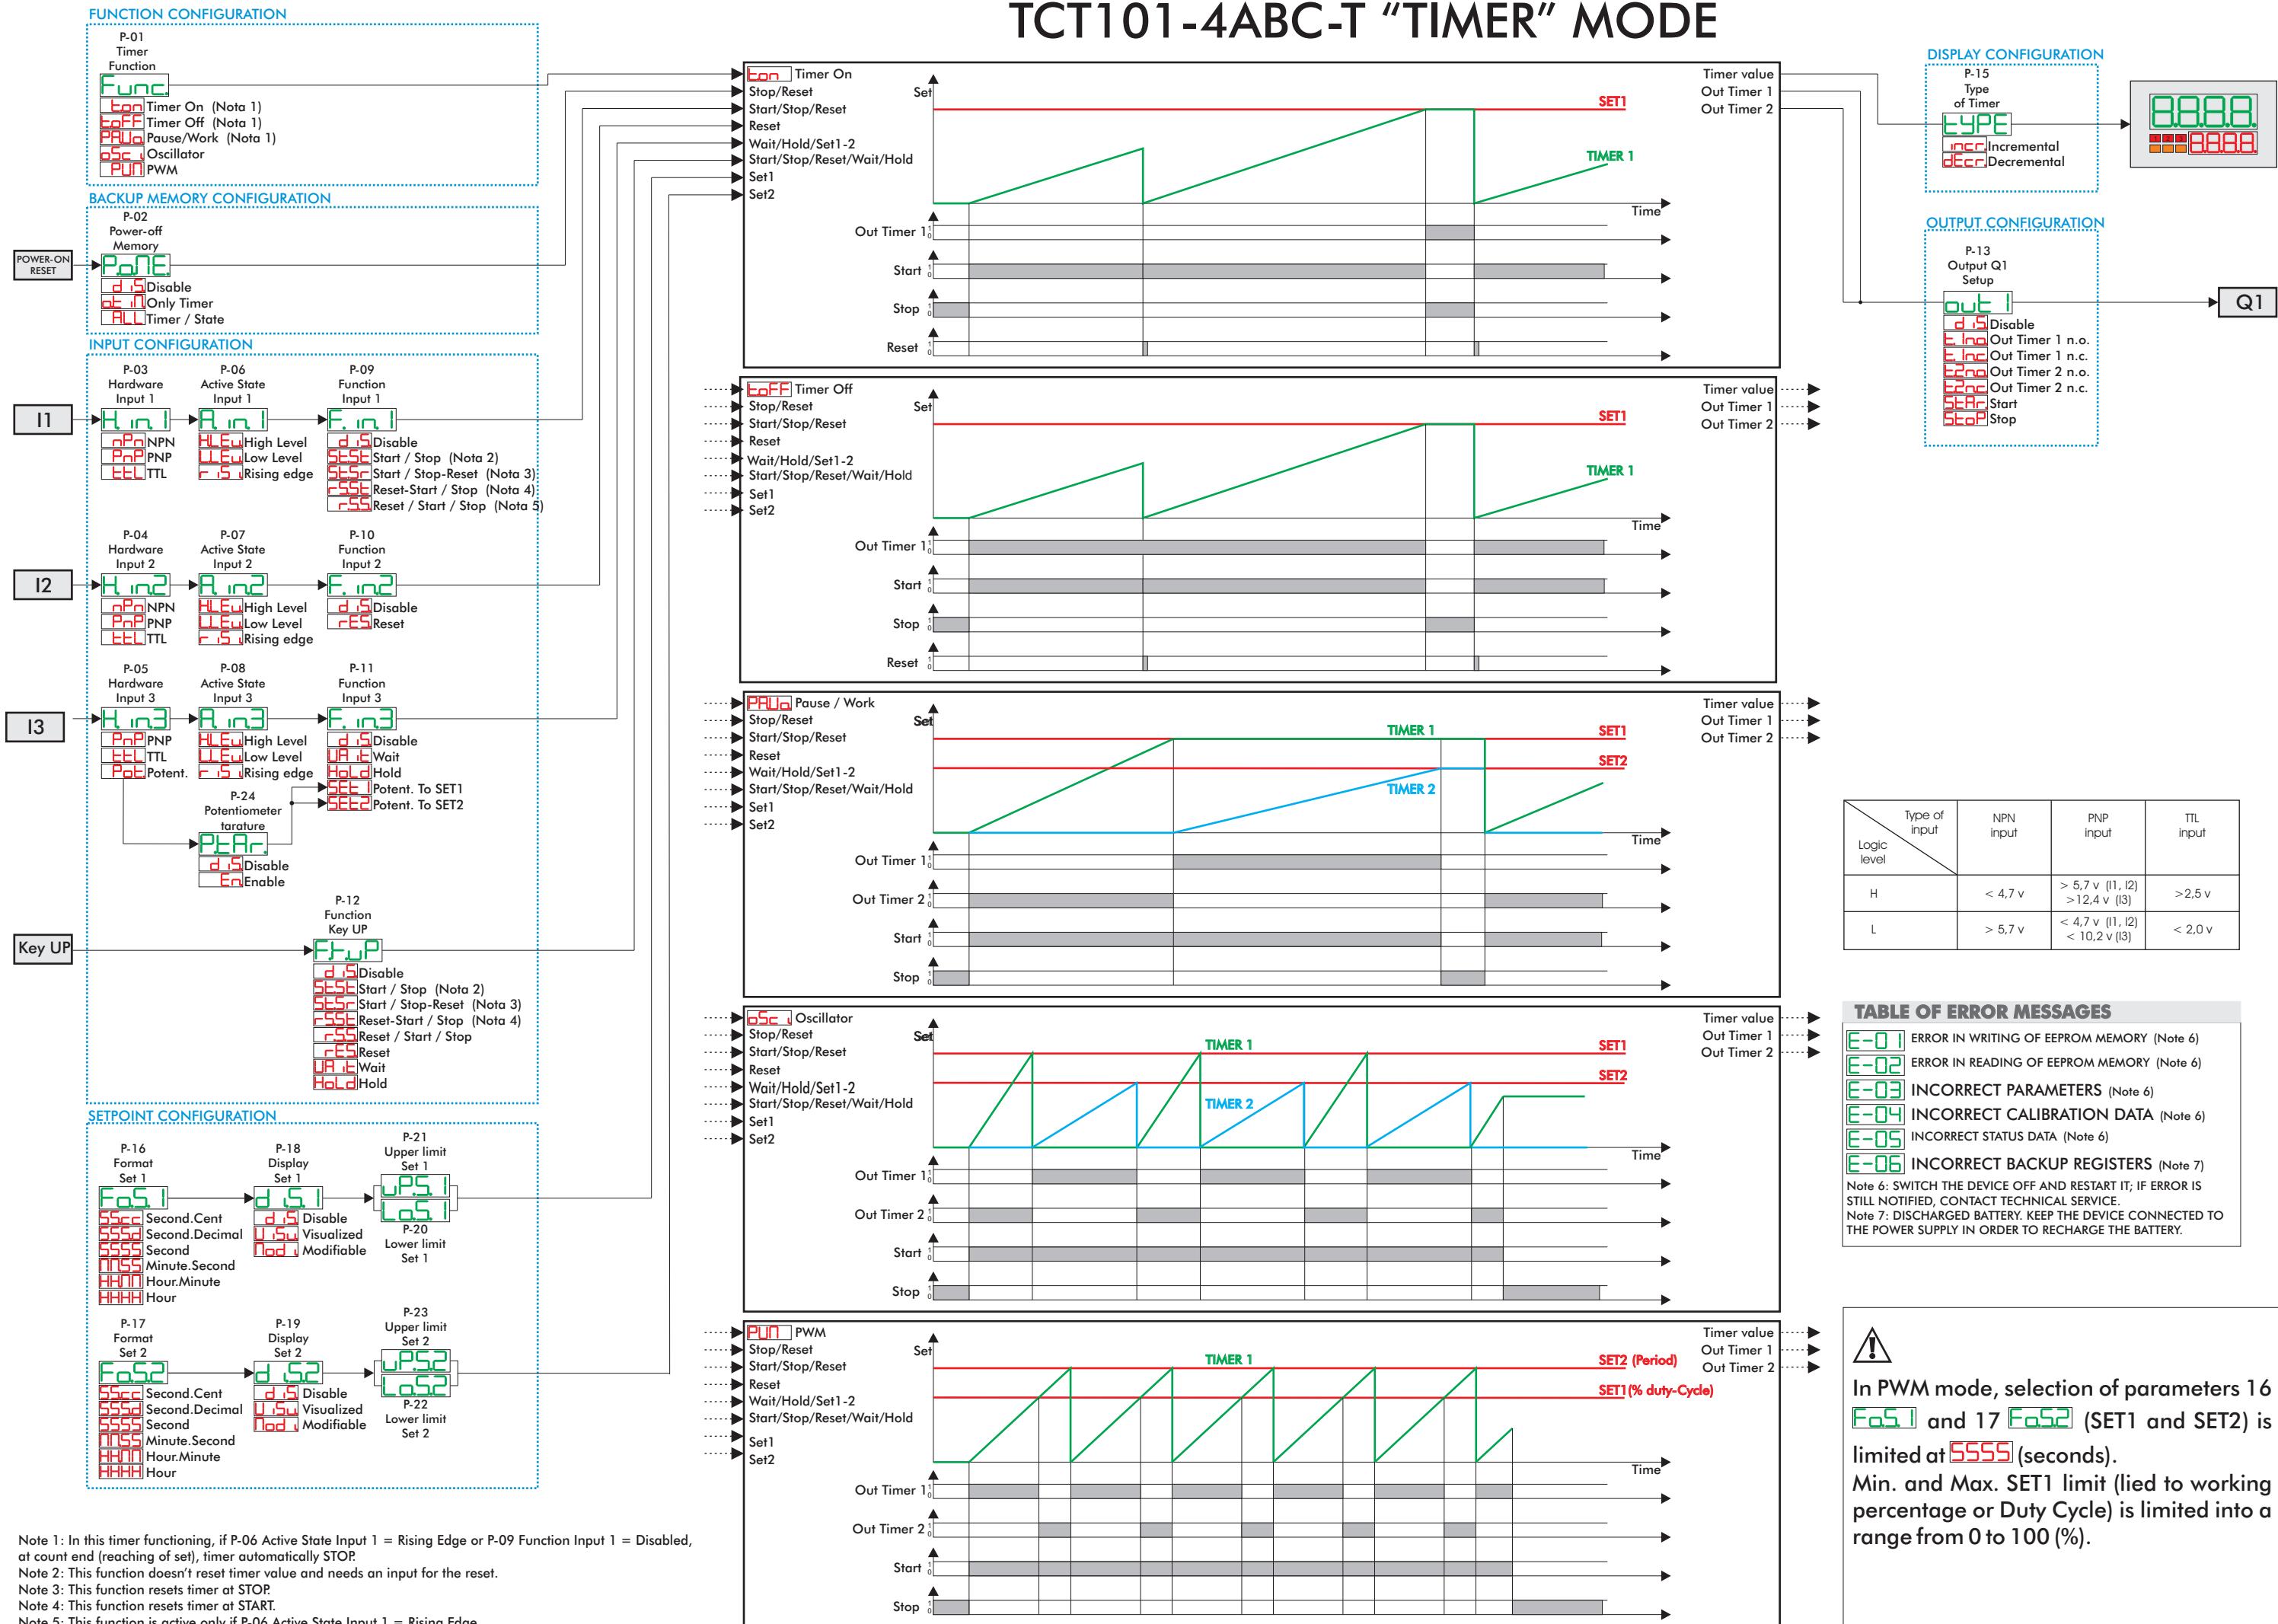

PARAMETERS LIST

FUNCTION CONFIGURATION


P-01 Counter Function	Counter functions	
SinG	Single (1 Counter)	1 counter functioning
doub	Double (2 Counters)	2 counters functioning
BACKUP MEMORY CONFIGURATION		
PoE	P-02 Power-off Memory	Power-off memory
d.S	Disable	No counter stored at switch-off
cnt_1	Counter 1	Counter 1 stored at switch-off
cnt_2	Counter 2	Counter 2 stored at switch-off
All	All Counters	All counters stored at switch-off
INPUT CONFIGURATION		
H.in_1	P-03 Hardware input 1	Input 1 hardware configuration
H.in_2	P-04 Hardware input 2	Input 2 hardware configuration
H.in_3	P-05 Hardware input 3	Input 3 hardware configuration
nPN	NPN	NPN (not available on input 3)
PnP	PNP	Default
TTL	TTL	
Pot.	Potent.	Potentiometro (available only on input 3)
F.I.L.	P-06 Filter Delay Input 1	Digital input 1 filter configuration
F.I.D.	P-07 Filter Delay Input 2	Digital input 2 filter configuration
F.I.D.	P-08 Filter Delay Input 3	Digital input 3 filter configuration
NO	No delay	Input filter disabled
0,5 ms	0,5 ms	0,5 ms filter
...	...	(Step 0,5 ms)
1000	100,0 ms	100,0 ms filter
A.in_1	P-09 Active State Input 1	Input 1 active state
A.in_2	P-10 Active State Input 2	Input 2 active state
A.in_3	P-11 Active State Input 3	Input 3 active state
HLEu	High Level	High level (only for input 2)
LLLe	Low Level	Low level (only for input 2)
r.S	Rising edge	Rising edge
FALL	Falling edge	Falling edge
F.in_3	P-12 Function Input 3	Input 3 related function
d.S	Disable	Disabled
Enc2	Encoder Z	Phase Z encoder loading
Ld_1	Load Counter 1	Counter 1 loading
Ld_2	Load Counter 2	Counter 2 loading
Ld_12	Load Counter 1&2	Counters 1 and 2 loading
SET1	Set1	Set 1 setting by potentiometer
SET2	Set2	Set 2 setting by potentiometer
F.up	P-13 Function Key UP	UP (up arrow key)
d.S	Disable	Disabled
Ld_1	Load Counter 1	Counter 1 loading
Ld_2	Load Counter 2	Counter 2 loading
Ld_12	Load Counter 1&2	Counters 1 and 2 loading
Ptar	P-14 Potentiom. Tarature	Potentiometer calibration procedure
d.S	Disable	Disabled
En	Enable	Enabled
COUNTER CLOCK CONFIGURATION		
CLC_1	P-15 Clock Counter 1	Counter 1 count mode selection
CLC_2	P-33 Clock Counter 2	Counter 2 count mode selection
d.S	Disable	Disabled
Enc	Encoder	Bidirectional encoder (I1) phase A, (I2) phase B
uP--	I1 Up, I2 Off	UP mode (I1)
da--	I1 Down, I2 Off	DOWN mode (I1)
--uP	I1 Off, I2 Up	UP mode (I2)
--da	I1 Off, I2 Down	DOWN mode (I2)
uPda	I1 Up, I2 Down	UP (I1) - DOWN mode (I2)
uP..d	I1 Up, I2 Incr./Decr.	UP mode (I1) with reverse direction (I2)
uPEL	I1 Up, I2 En./Lock	UP mode (I1) with count lock (I2)
uPEH	I1 Up, I2 En./Hold	UP mode (I1) with keeping value on display (I2)
doEL	I1 Down, I2 En./Lock	DOWN mode (I1) with count lock (I2)
doEH	I1 Down, I2 En./Hold	DOWN mode (I1) with keeping value on display (I2)
oc2	Output Counter 2/1	UP count on rising edge of counter 2/1 output
COUNTER DISPLAY CONFIGURATION		
d.L_1	P-16 Display Counter 1	Counter 1 visualization selection
d.L_2	P-34 Display Counter 2	Counter 2 visualization selection
d.S	Disable	Counter value not visualized
U.Su	Visualized	Counter value visualized
dPC_1	P-17 Decimal Point Counter 1	Counter 1 visualization format
dPC_2	P-35 Decimal Point Counter 2	Counter 2 visualization format
0	0	Visualization with no decimal digit
0.0	0.0	Visualization with 1 decimal digit
0.00	0.00	Visualization with 2 decimal digits
0.000	0.000	Visualization with 3 decimal digits
inf_1	P-18 Counter 1 input counts	Counter 1 input counts (1...9999)
inf_2	P-36 Counter 2 input counts	Counter 2 input counts (1...9999)
u.F_1	P-19 Counter 1 Visualized Counts	Counter 1 visualized counts (1...9999)
u.F_2	P-37 Counter 2 Visualized Counts	Counter 2 visualized counts (1...9999)

MODBUS WORD ADDRESSES IN COUNTER MODE

Modbus Address	Description	Read Write	Reset Value
600	Counter 1 H value	RO	?
601	Counter 1 L value	RO	?
602	Counter 1 H counts	RO	?
603	Counter 1 L counts	RO	?
604	Counter 1 logic output - bit 0 Counter 1 logic output	RO	?
605	Counter 1 Lock Hold status - bit 0 lock function status - bit 1 hold function status	RO	?
606	Counter 1 count direction - 0 normal count direction - 1 reverse count direction	RO	?
607	Counter 1 serial command done Shows value of the last serial command done	RO	0
608	Counter 1 H hold value	RO	?
609	Counter 1 L value	RO	?
610	Counter 1 H frequency (Hz)	RO	?
611	Counter 1 L frequency (Hz)	RO	?
612	Counter 1 H frequency value	RO	?
613	Counter 1 L frequency value	RO	?
620	Counter 1 serial command - 0 no command - 1 load command - 2 enable/disable lock function - 3 enable/disable hold function - 4 reverse count direction - 5 Enter onward count - 6 Enter backward count	WO	0
630	Counter 2 H value	RO	?
631	Counter 2 L value	RO	?
632	Counter 2 H counts	RO	?
633	Counter 2 L counts	RO	?
634	Counter 2 logic output	RO	?
635	Counter 2 Lock Hold status	RO	?
636	Counter 2 count direction	RO	?
637	Counter 2 serial command done	RO	0
638	Counter 2 H Hold value	RO	?
639	Counter 2 L Hold value	RO	?
640	Counter 2 H frequency (Hz)	RO	?
641	Counter 2 L frequency (Hz)	RO	?
642	Counter 2 H frequency value	RO	?
643	Counter 2 L frequency value	RO	?
650	Counter 2 serial command	WO	0
2000	Parameter P-00	RW	EEPROM
2001	Parameter P-01	RW	EEPROM
2002	Parameter P-02	RW	EEPROM
...		RW	EEPROM
2052	Parameter P-52	RW	EEPROM
2053	Parameter P-53	RW	EEPROM

TCT101-4ABC-T

“COUNTER”

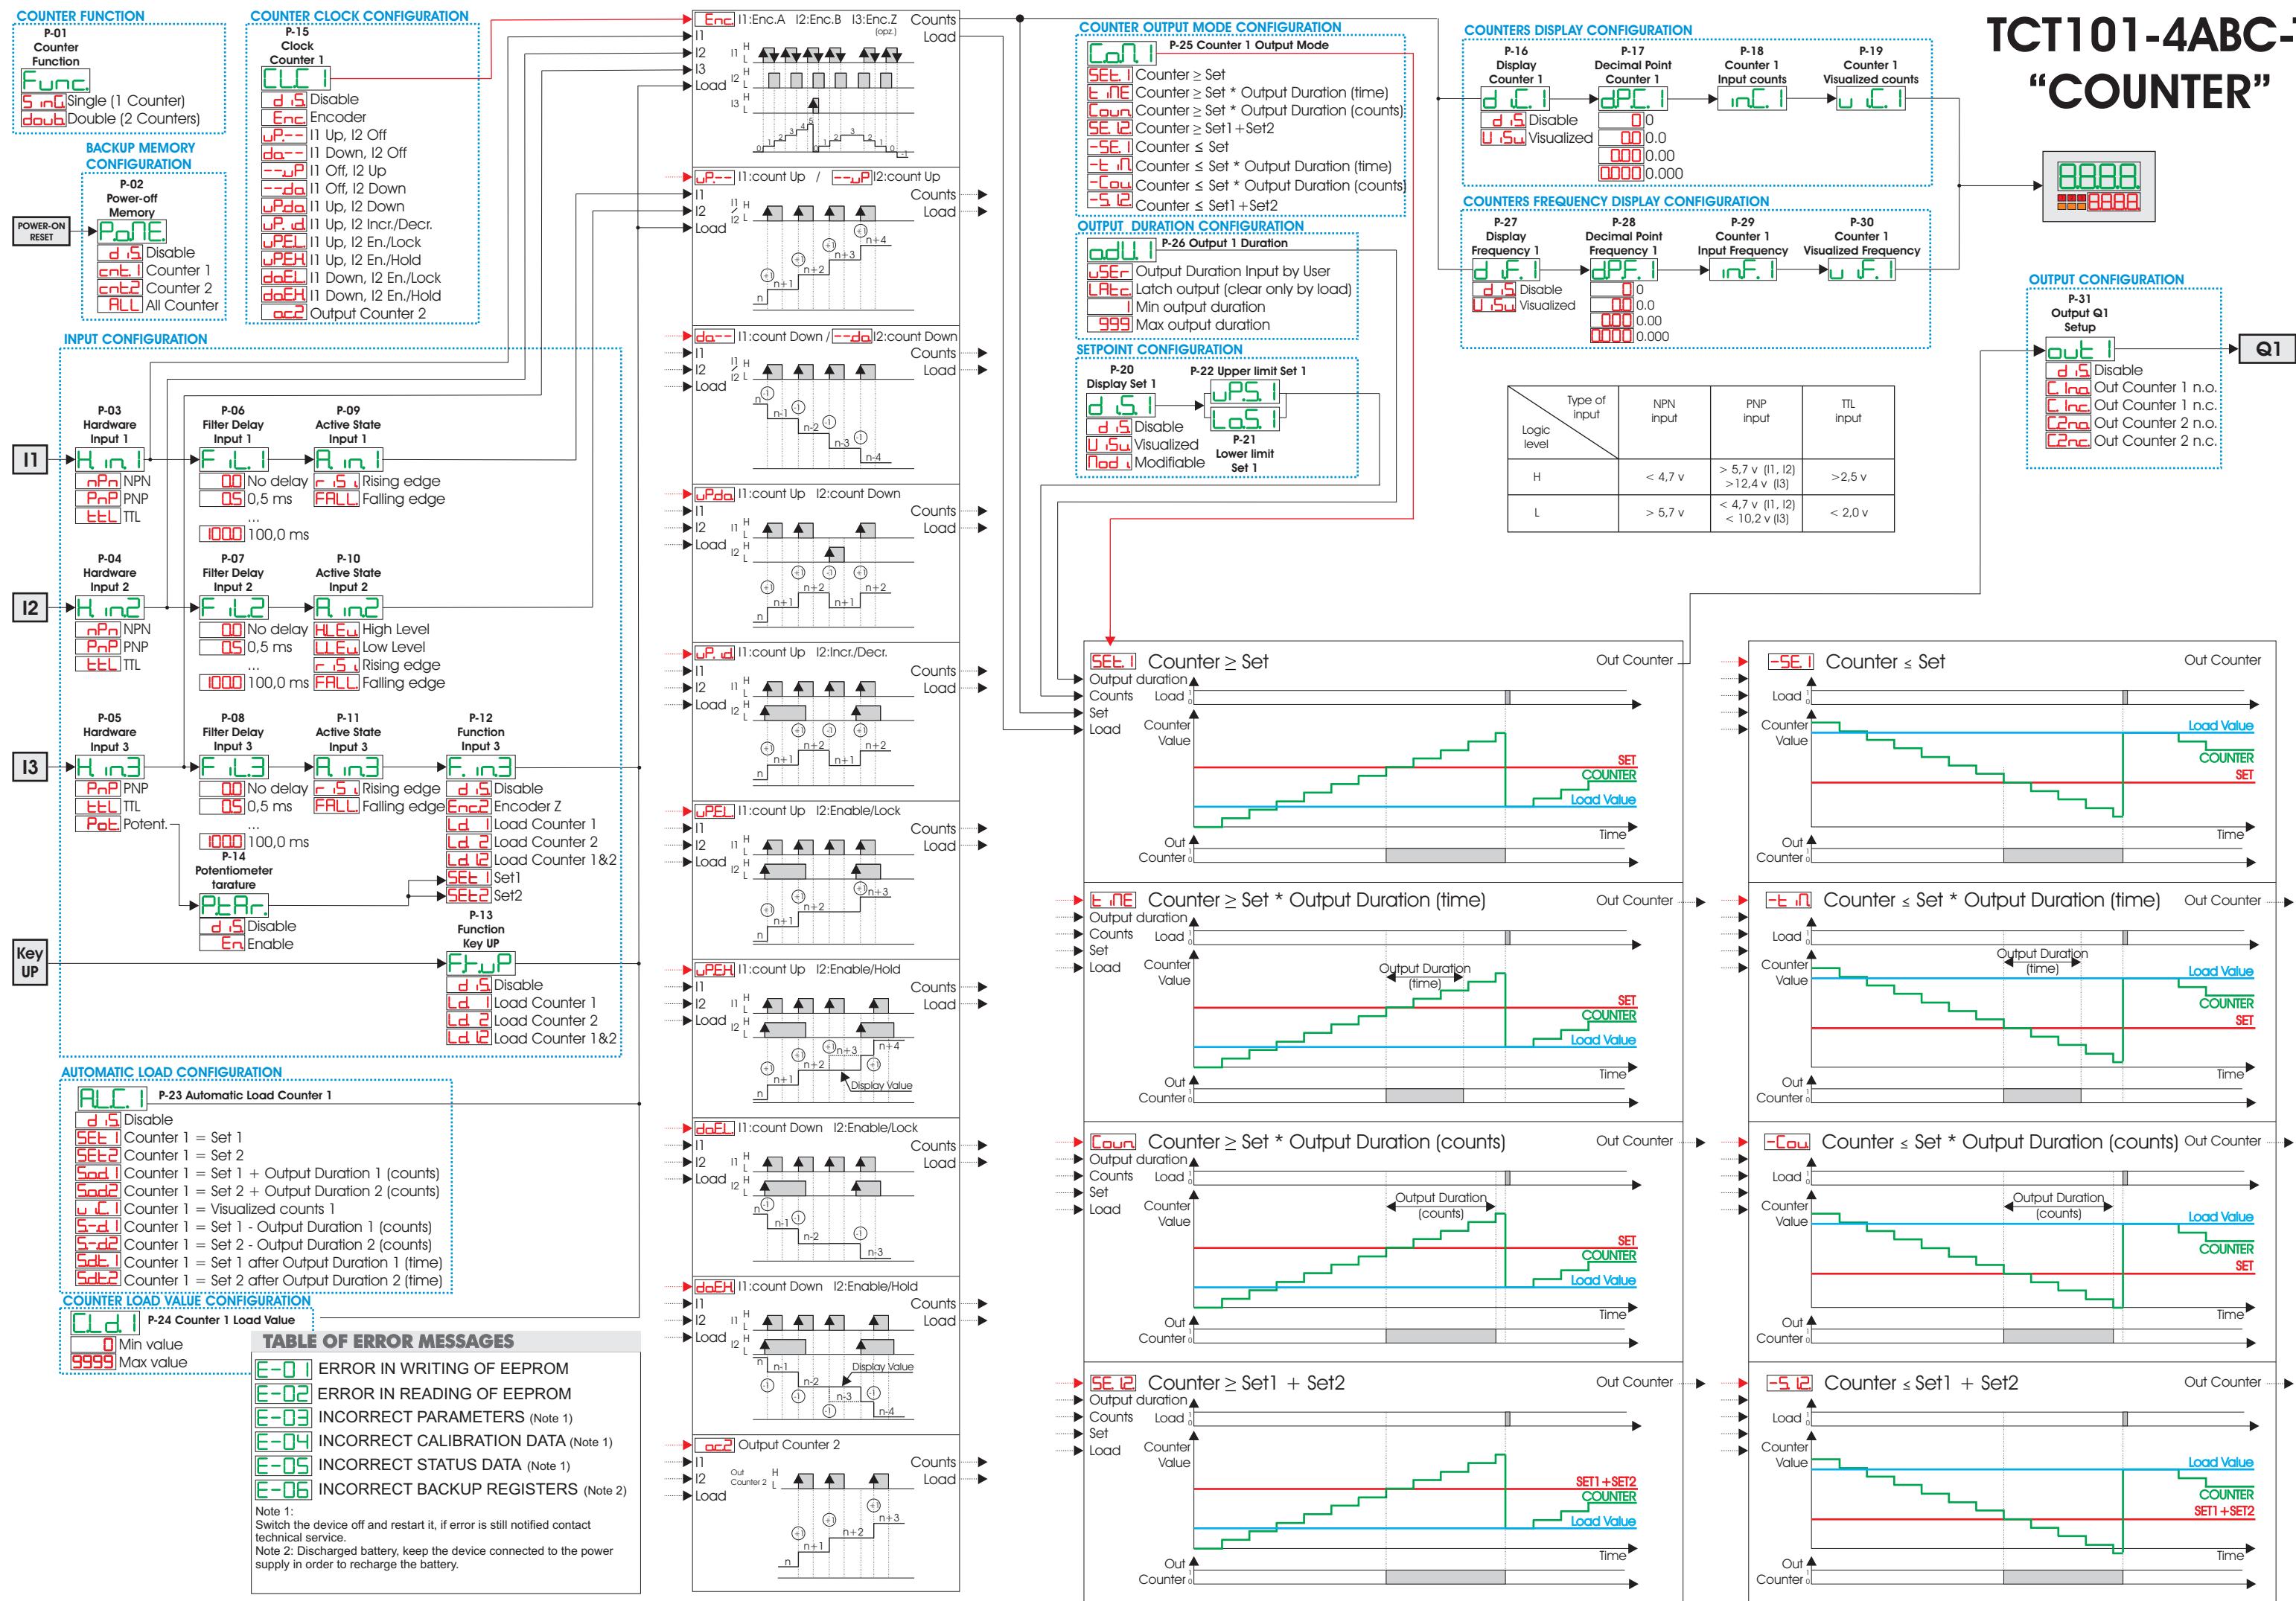

PARAMETERS LIST

CLOCK INPUT CONFIGURATION

P-01 Clock Input	Input signal selection	
<i>I1</i>	Input signal on I1	Default
<i>Enc</i>	Encoder	Input signal on I1 and I2 (bidirectional encoder)

INPUT CONFIGURATION

P-02 Hardware input 1	Input 1 hardware configuration	
P-03 Hardware input 2	Input 2 hardware configuration	
P-04 Hardware input 3	Input 3 hardware configuration	
<i>NPN</i>	NPN (not available on input 3)	
<i>PNP</i>	PNP	Default
<i>TTL</i>	TTL	
<i>Pot.</i>	Potentiometer	Potentiometer (available only on input 3)

P-05 Filter Input 1	Input 1 hardware filter configuration	
<i>Off</i>	Input hardware filter disabled	Default
<i>On</i>	Input hardware filter enabled (22nF)	

P-06 Active State Input 2	Input 2 active status	
<i>High Level</i>	High level	Default
<i>Low Level</i>	Low level	

P-08 Function Input 2	Function associated to input 2	
<i>d.s</i>	Disabled	Default
<i>outE</i>	Out Enable/Disable	Tachometer outputs enabled
<i>Hold</i>	Hold (solo per I3)	Hold of visualized tachometer value
<i>SEE1</i>	Set1 (solo per I3)	Set1 setting by potentiometer
<i>SEE2</i>	Set2 (solo per I3)	Set2 setting by potentiometer

P-09 Function Input 3	Function associated to input 3	
<i>d.s</i>	Disabled	Default
<i>outE</i>	Out Enable/Disable	Tachometer outputs enabled
<i>Hold</i>	Hold (solo per I3)	Hold of visualized tachometer value
<i>SEE1</i>	Set1 (solo per I3)	Set1 setting by potentiometer
<i>SEE2</i>	Set2 (solo per I3)	Set2 setting by potentiometer

P-10 Potiom. Tarature	Potentiometer calibration function	
<i>d.s</i>	Disabled	Default
<i>En</i>	Enabled	

P-11 Function Key UP	Function associated to UP key (up arrow)	
<i>d.s</i>	Disabled	Default
<i>NAHP</i>	Display max peak	Max. registered peak visualization (reset with UP+DOWN key)
<i>F1da</i>	P-12 Function Key DOWN	Function associated to DOWN key (down arrow)
<i>d.s</i>	Disabled	Default
<i>MinP</i>	Display min peak	Min. registered peak visualization (reset with UP+DOWN key)

BACKUP MEMORY CONFIGURATION	Power-off Memory	Power-off memory
<i>d.s</i>	No peak value stored at power-off	Default
<i>NAHP</i>	Max Peak	Max. peak stored at power-off
<i>MinP</i>	Min. peak stored at power-off	
<i>All</i>	All Peak	Max. and Min. peaks stored at power-off

CLOCK INPUT CONFIGURATION	P-14 Minimum Input Frequency	Minimum visualized frequency
<i>0.01</i>	0.01 Hz	For lower frequency values 0 is visualized
	...	on display. This parameter changes maximum display
<i>0.09</i>	0.09Hz	update time from 100 to 0.1 sec.
<i>0.1</i>	0.1 Hz	Default
	...	
<i>10.0</i>	10.0Hz	

SFL	P-15 Software Filter	Sampling frequency software filter
<i>off</i>	No software filter used for reading.	Default
<i>0.01</i>	0.01 sec	Mean realized on samplings done within the time
	...	set in this parameter. Display will be update at max.
<i>1.00</i>	1.00 sec	with this time interval.

DISPLAY CONFIGURATION	P-16 Timebase	Visualization time base
<i>sec</i>	Visualized value refered to second	Default
<i>min</i>	Visualized value refered to minute	
<i>hour</i>	Visualized value refered to hour	

P-17 Pulse in Unit	Number of impulses on single unit. Revolution	
<i>9999</i>	99.99 pulse	counter indicates how many impulses corresponds at a complete revolution.
	...	
<i>0.01</i>	0.01 pulse	
<i>1</i>	1 pulse	Default
	...	
<i>9999</i>	9999 pulse	

P-18 Decimal Point	Tachometer value visualization format	
<i>0</i>	No decimal digit visualization	Default
<i>0.0</i>	1 decimal digit visualization	
<i>0.00</i>	2 decimal digits visualization	
<i>0.000</i>	3 decimal digits visualization	

MEASURE UNIT CONFIGURATION	P-19 Measure Unit 1	Setting digit 1 of visualized measure unit
P-20 Measure Unit 2	Setting digit 2 of visualized measure unit	
P-21 Measure Unit 3	Setting digit 3 of visualized measure unit	
P-22 Measure Unit 4	Setting digit 4 of visualized measure unit	
<i>8888</i>	Edit digits	Set as chosen each of 4 digits
		Default ----

SETPOINT CONFIGURATION

H51	P-23 Display Set 1	Setpoint 1 visualization selection	
<i>d.s</i>	Disable	Setpoint value not visualized	Default Set2
<i>U.Su</i>	Visualized	Setpoint value visualized	
<i>Modif</i>	Modifiable	Setpoint value visualized and modifiable	Default Set1
L51	P-24 Lower Limit Set 1	Set 1 lower limit (0...9999)	Default 0
L52	P-27 Lower Limit Set 2	Set 2 lower limit (0...9999)	Default 0
U51	P-25 Upper Limit Set 1	Set 1 upper limit (0...9999)	Default 999
U52	P-28 Upper Limit Set 2	Set 2 upper limit (0...9999)	Default 999

OUTPUT ENABLE CONFIGURATION

outE	P-29 Output Enable	Enabled outputs	
<i>EnAb</i>	Always enable	Tachometer outputs always enabled	Default
<i>Auto</i>	Automatic enable	Outputs enabled automatically	
<i>inP</i>	Enable by input	Tachometer outputs enabled by digital inputs	

TACHOMETER LOGIC OUTPUT MODE CONFIGURATION

L1	P-30 Logic Output Mode1	Tachometer logic output 1 mode	
L2	P-34 Logic Output Mode2	Tachometer logic output 2 mode	

TCT101-4ABC-T "TACHOMETER" MODE

