




# USER MANUAL TCT101-1ABC

PIXSYS www.pixsys.net  
e-mail: sales@pixsys.net - support@pixsys.net  
Software V 2.06  
2300.10.120-RevJ 060513



## DIMENSION and INSTALLATION

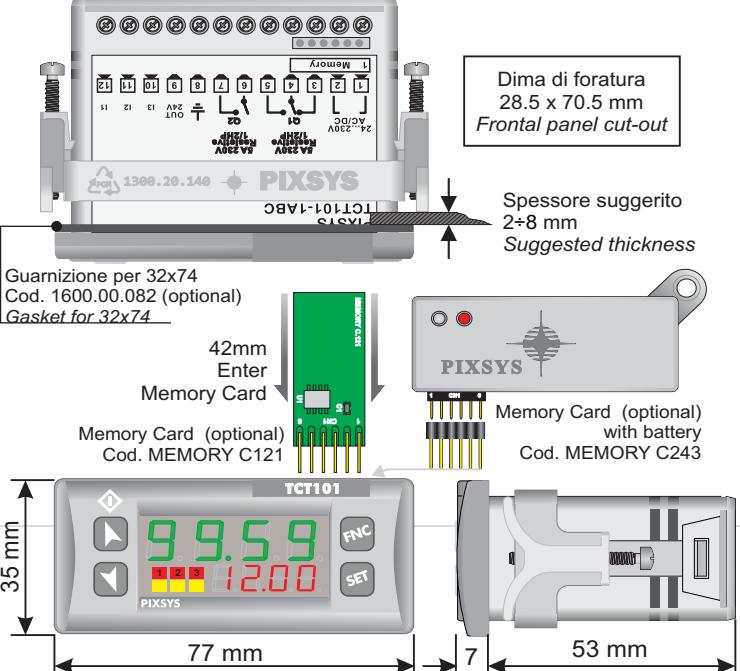

PRESS	EFFECT
1	Display SETPOINT 1 / 2
2	Modify selected SETPOINT
2a	Select the chosen digit
3a	Modify the flashing digit of the selected setpoint

## LED MEANING

Report the activation of Q1

Report the activation of Q2

Report serial transmission by the TCT101

## TECHNICAL DATA

**Operating temperature** Operating temperature 0-40°C, humidity 35..95%RH

**Sealing** Front panel IP65 (with optional gasket), Box IP30, Terminal blocks IP20

**Material** PC ABS UL94V0 self-extinguishing

**Digital** 3PNP/NPN configurable as analogue for potentiometers.  
**Inputs** (max 28 Vdc in PNP mode)

**Outputs** 2 relays 5A resistive charge  
**OUT 24V** 30mA(24Vac), 40mA(24Vdc), 60mA (110...230Vac)

**Back-UP** Rechargeable battery, approx. 7days autonomy

**Programming Software** Labsoftview 2.6 or later

**Power Supply** 24...230Vac/Vdc +/-15% 50/60Hz / 2W

## INTRODUCTION

Thanks for choosing a Pixsys device.

Timer TCT101 can be set in 5 different modes: Timer-ON, Timer-OFF, Pause-Work, Oscillator, PWM (time-proportioned output), all options with independent setting of ON-OFF time. 3 digital inputs are available (NPN/PNP/Potential free contact) for external commands like Start, Stop, Reset; one input is also analogic in order to allow the modification of working times by external potentiometer. 5 different time bases (hundredths, tenths, seconds, minutes, hours).




Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.

Disconnect power supply before proceeding to hardware settings or electrical wirings.

Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual.

Do not dispose electric tools together with household waste materials in observance of European Directive 2002/96/CE

## WIRING DIAGRAM

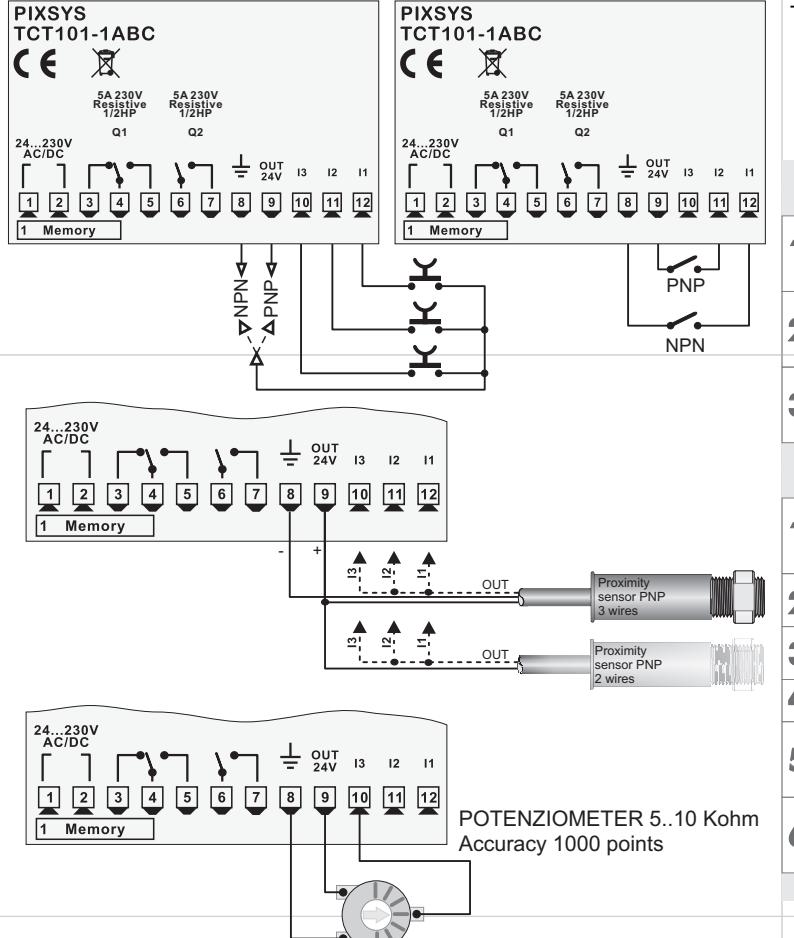

### Potentiometer:

To modify Set1 or Set2 by external potentiometer follow the steps below:

1- use potentiometers 5kOhm to 10kohm

2- connect cursor to pin I3; a wrong connection may damage the potentiometer and lead to lock of the device.

3- accuracy on input is max 1000 points, therefore set the parameters "Upper limit" and "Lower limit" with a max difference of 1000 units.

(Ex.: LoS1 to 50,0 and uPS1 to 150,0 to modify time value related to Set1 between 50 and 150 seconds with steps of one tenth). Greater differences would make unstable the less significant digit.

4- To calibrate the scale of potentiometer enter the configuration mode and select:

Hin.3 as Pot

Fin.3 as Set1 or Set2

PtAras Enable

Exit configuration mode and place potentiometer at minimum level and press key, then place potentiometer at max level and press premere key: the device automatically exit the calibration procedure.

N.B.: A switch-off of the device would interrupt the calibration.

## MEMORY CARD (optional)

Parameters and setpoint values can be copied from one device to another using the Memory card.

There are two methods:

> **With the device connected to the power supply**  
insert the memory card when the controller is off.

On activation display 1 shows and display 2 shows (Only if the values stored on Memory Card are correct).

By pressing the key display 2 shows .

Confirm using the key.

The device loads the new data and starts again.

> **With the controller disconnected from the power supply**

The memory card is equipped with an internal battery with uses.

Insert the memory card and press the programming button.

When writing the parameters, the LED turns red and on completing the procedure it changes to green. It is possible to repeat the procedure.

### UPDATING MEMORY CARD.

To update the memory card values, follow the procedure described in the first method, setting display 2 to so as not to load the parameters on controller.

Enter configuration and **change at least one parameter**.

Exit configuration. Changes are saved automatically.

## LOADING DEFAULT VALUES

This procedure restores the factory settings of the instrument.

## LOADING DEFAULT SETTINGS

PRESS	EFFECT	OPERATION
1  for 3 seconds	Display 1 shows  and 1st digit flashes, Display 2 shows .	
2	Modify the flashing digit, press  to reach the next digit	Enter password
3	The device loads default values (factory settings)	Switch-off and restart the device

## MODIFY PARAMETERS

PRESS	EFFECT	OPERATION
1  for 3 seconds	Display 1 shows  and 1st digit flashes, display 2 shows .	
2	Modify the flashing digit, press  to reach the following digit	Enter password
3	Display shows first parameter of configuration table .	
4	Scroll the parameters	
5  +	Increase or decrease value on display by pressing  and one of the arrow keys at same time	Enter new data which will be stored releasing the keys
6	End of configuration, the device exits programming mode.	

## LIST of PARAMETERS

### FUNCTION CONFIGURATION

Func	P-01 Timer Function	Timer operating modes
	Timer On	Activate output at elapsing of counting
	Timer Off	Deactivate output at elapsing of counting
	Pause/Work	T1 and T2 start in sequence
	Oscillator	T1 and T2 start in sequence and cycling
	PWM	Activate a percentage of output on a fixed time base

### BACKUP MEMORY CONFIGURATION

func	P-02 Power-off Memory	Memory after switch-off
	Disable	Disabled
	On	Memory stores only value of Timer
	All	Memory stores value of Timer and START/STOP status

### INPUT CONFIGURATION




H.in	P-03 Hardware Input 1	Configuration Input 1
	NPN	NPN
	PNP	PNP
	TTL	TTL

### P-04 Hardware Input 2 Configuration

H.in	P-04 Hardware Input 2	Configuration Input 2
	NPN	NPN
	PNP	PNP
	TTL	TTL

H.in P-05 Hardware Input 3 Configuration Input 3		
	PNP	PNP
	TTL	TTL
	Potent.	Potentiometer
R.in P-06 Active State Input 1 Activate Input 1		
	High Level	High level
	Low Level	Low level
	Rising edge	Rising edge
R.in P-07 Active State Input 2 Activate Input 2		
	High Level	High level
	Low Level	Low level
	Rising edge	Rising edge
R.in P-08 Active State Input 3 Activate Input 3		
	High Level	High level
	Low Level	Low level
	Rising edge	Rising edge
F.in P-09 Function Input 1 Function of Input 1		
	Disable	Disabled
	Start / Stop	Start / Stop
	Start / Stop-Reset	Start / Stop-Reset
	Reset-Start / Stop	Reset-Start / Stop
	Reset / Start / Stop	Reset / Start / Stop
F.in P-10 Function Input 2 Function Input 2		
	Disable	Disabled
	Reset	Default
F.in P-11 Function Input 3 Function Input 3		
	Disable	Disabled
	Wait	Wait (stop the counting)
	Hold	Hold (hold value on display but counting goes on)
	Potent. To SET1	Modify SET1 by potentiometer
	Potent. To SET2	Modify SET2 by potentiometer
F.up P-12 Function Key UP Function of		

# TCT101-1ABC "TIMER"

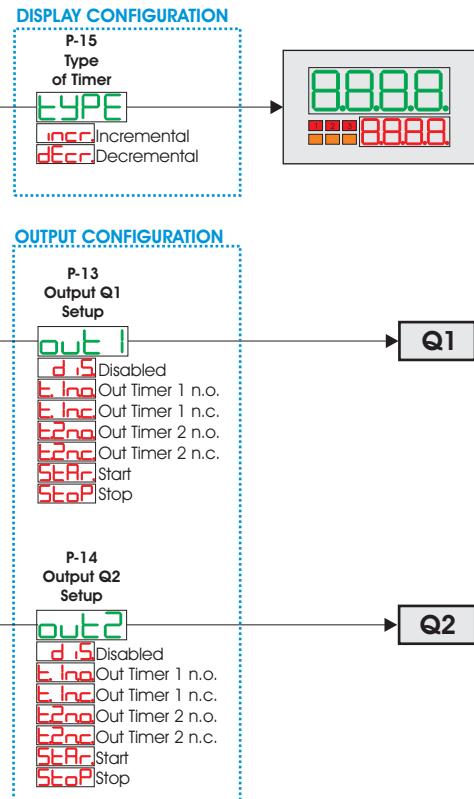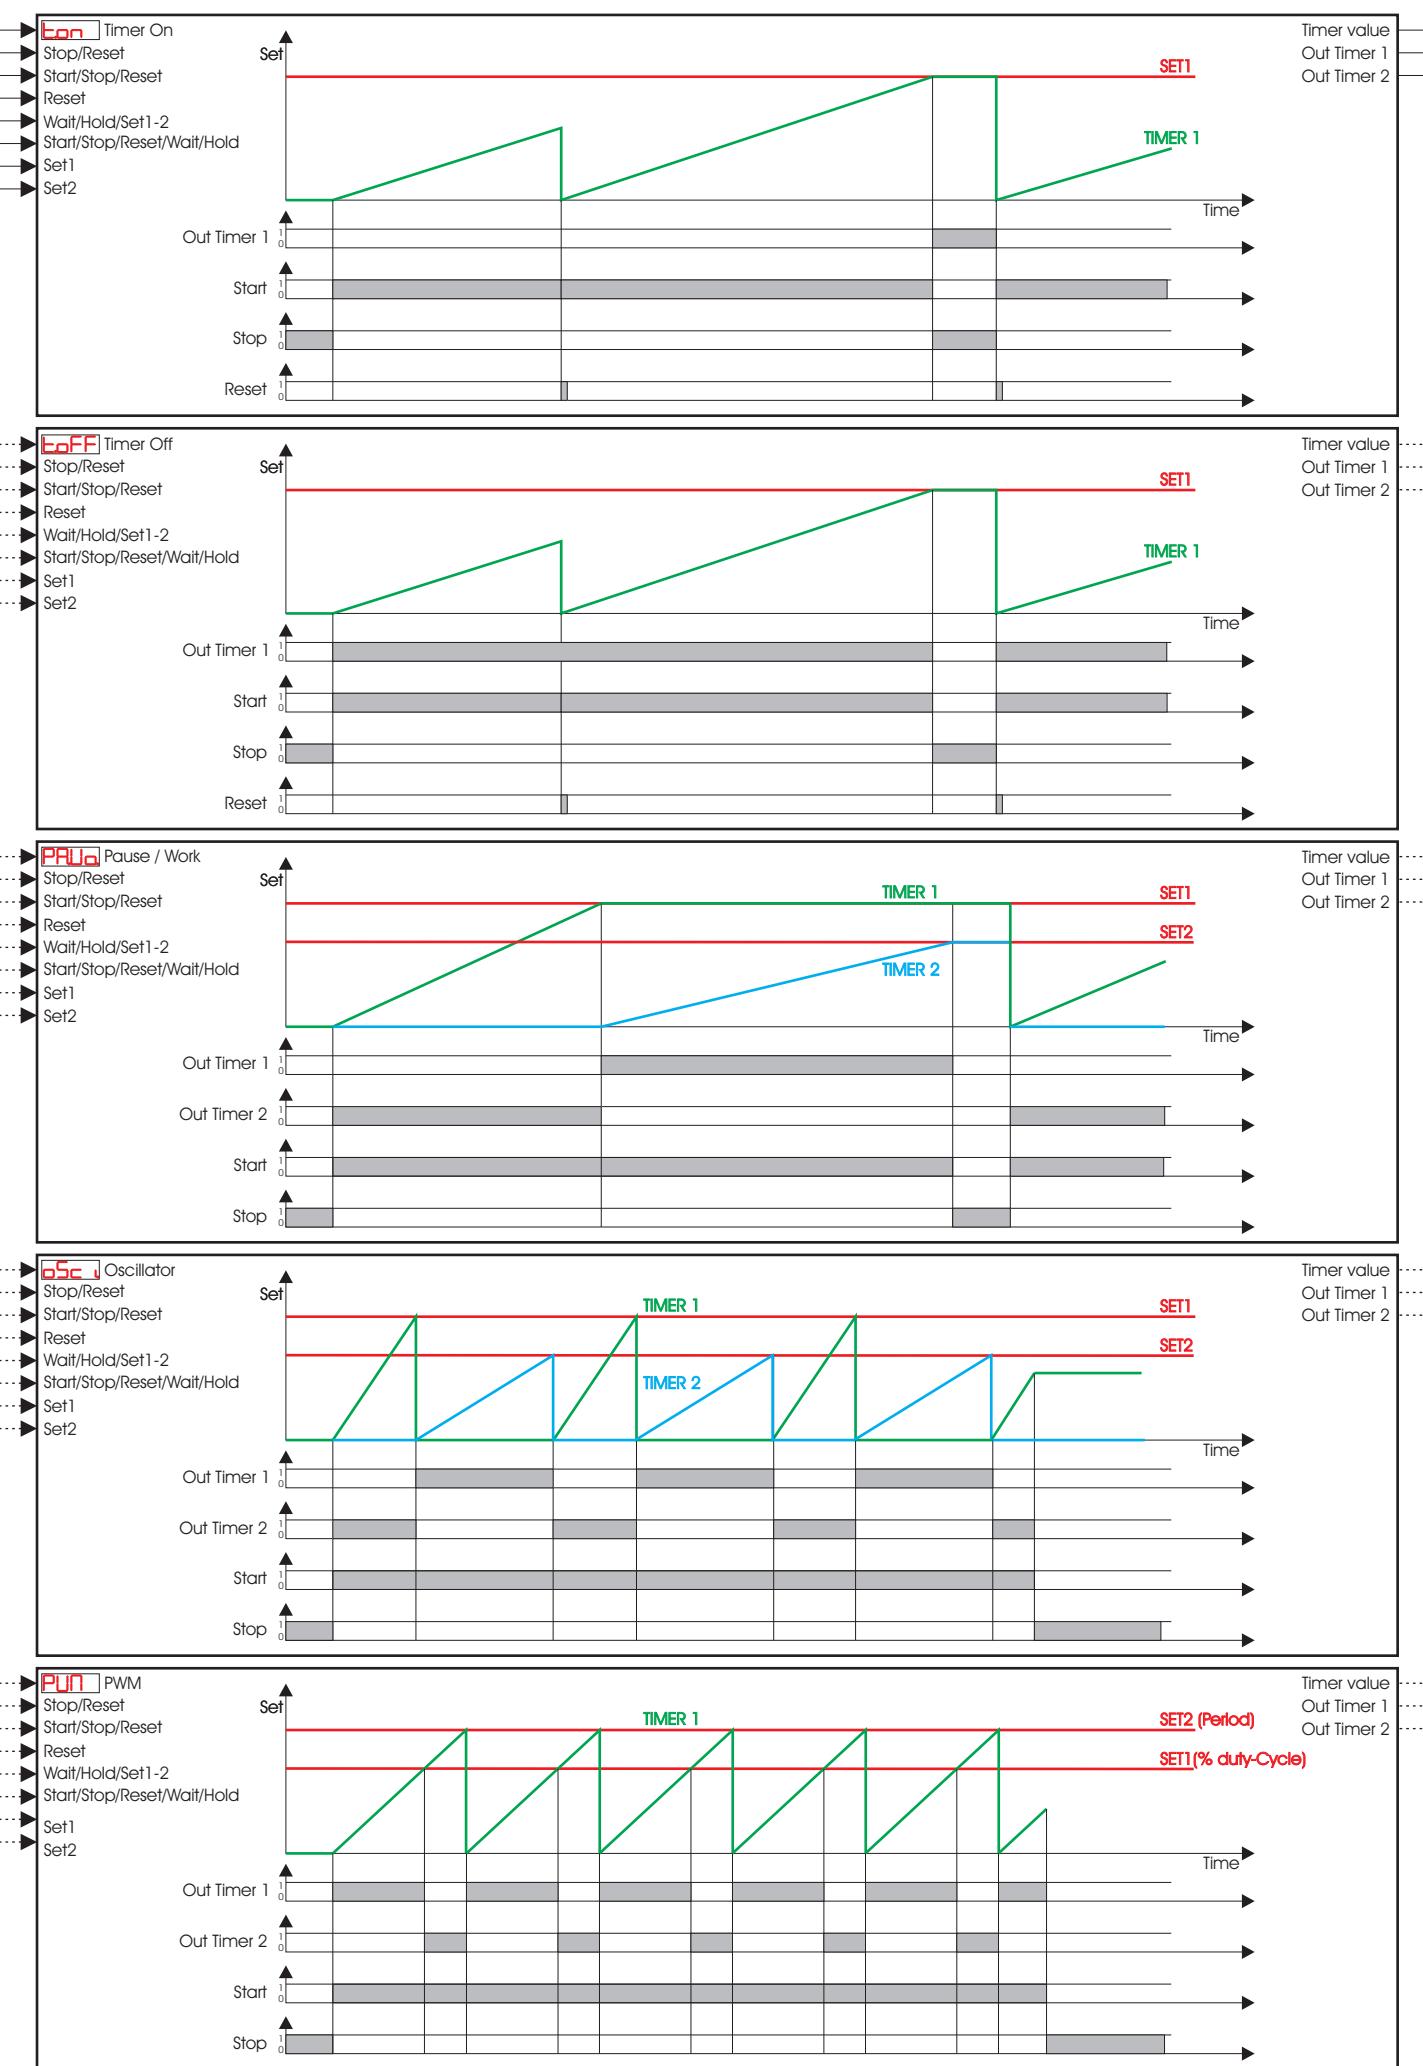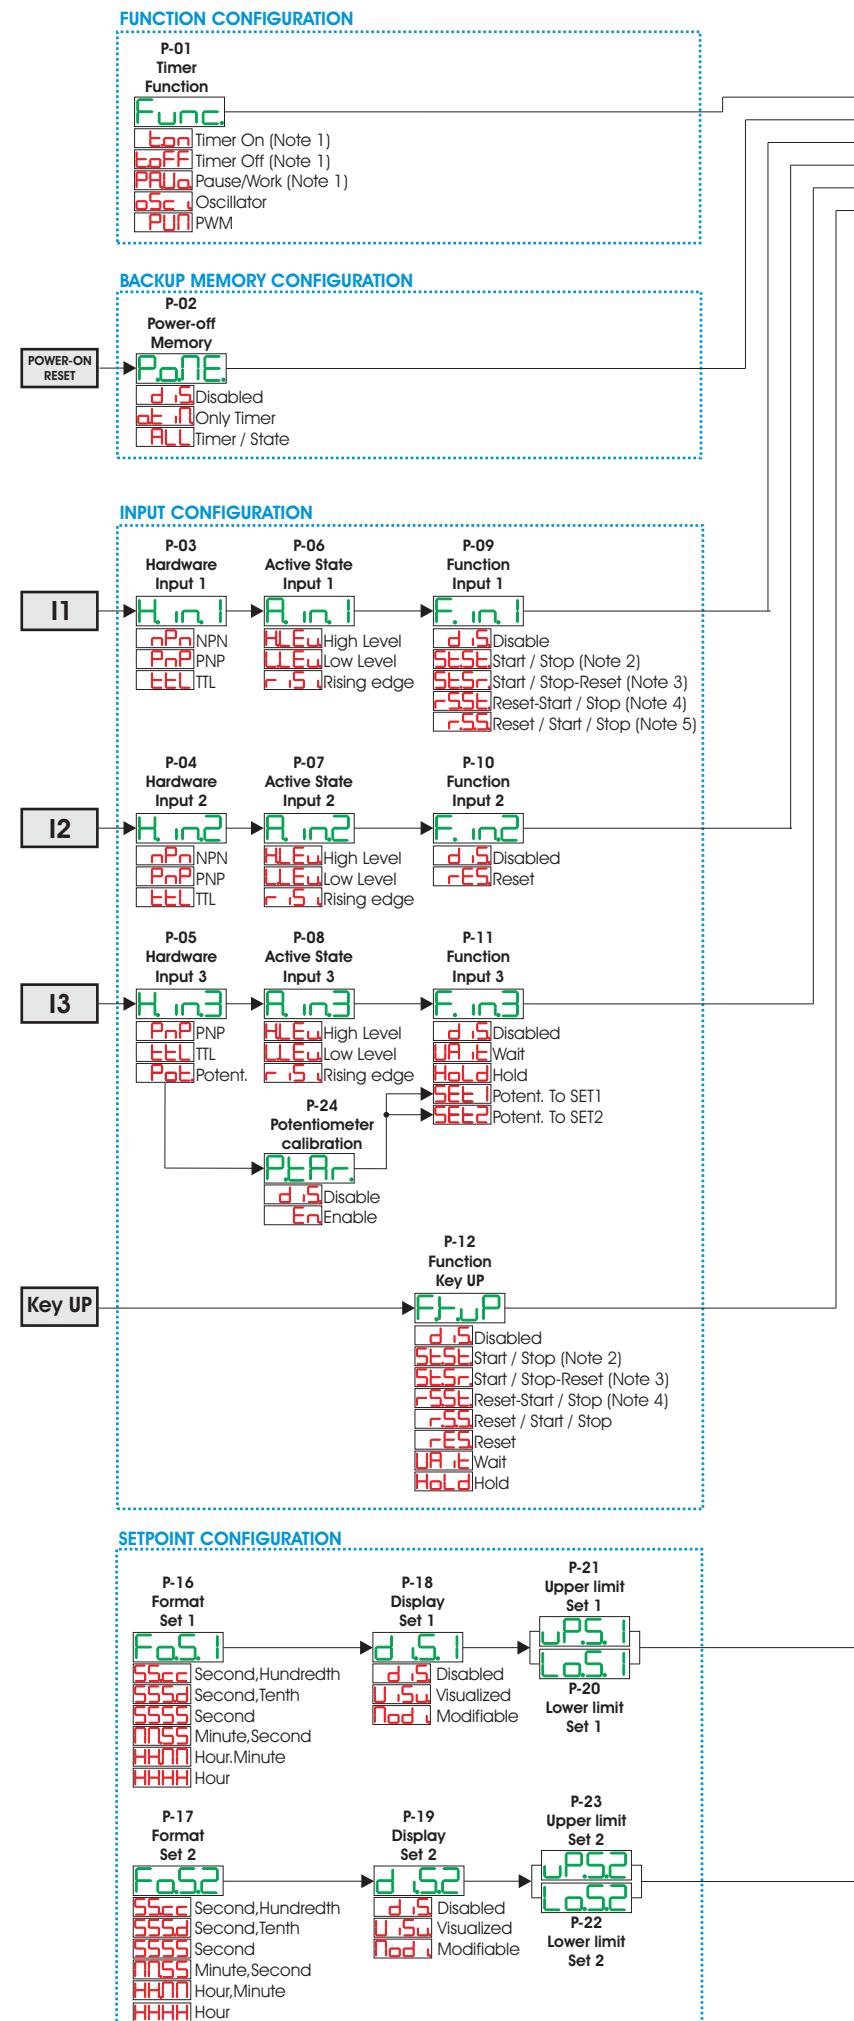

Type of input	NPN input	PNP input	TTL input
Logic level			
H	< 4,7 v (I1, I2)	> 12,4 v (I3)	> 2,5 v
L	> 5,7 v	< 10,2 v (I3)	< 2,0 v

**TABLE of ERROR MESSAGES**

<b>E-01</b>	ERROR in WRITING of EEPROM Memory (Note 1)
<b>E-02</b>	ERROR in READING of EEPROM Memory
<b>E-03</b>	Incorrect parameters (Note 1)
<b>E-04</b>	Incorrect calibration data (Note 1)
<b>E-05</b>	Incorrect status data (Note 1)
<b>E-06</b>	Incorrect BACKUP registers (Note 2)

Note 1: Switch the device off and restart it; if error is still notified, contact technical service

Note 2: Discharged battery; keep the device connected to power supply in order to recharge the battery.

▲ In PWM mode, the only option available on parameters 16 **F<sub>so1</sub>** and 17 **F<sub>so2</sub>** for format of SET1 and SET2 is **SS55** (seconds). Low and upper limits for SET1 (related to percentage of work or Duty Cycle) are allowed in the range 0 ... 100 (%).



**Note 1:** In this timer mode, if P-06 Active State Input 1 = Rising Edge or P-09 Function Input 1 = Disable, at the end of the count (reaching the set), the timer automatically goes to STOP.

**Note 2:** This function does not reset the timer value, therefore requires an input for reset.




**Note 3:** This function resets the timer at the instant of the STOP command.

**Note 4:** This function resets the timer at the instant of the START command.

**Note 5:** This function is active only if P-06 Active State Input 1 = Rising Edge

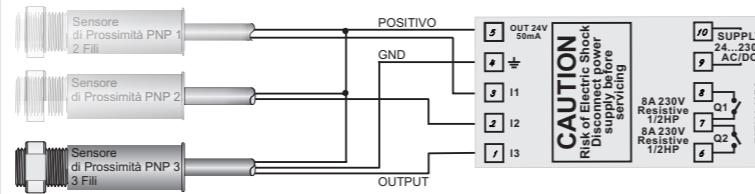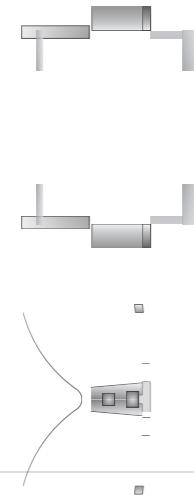

# TCT201-1ABC "TIMER"

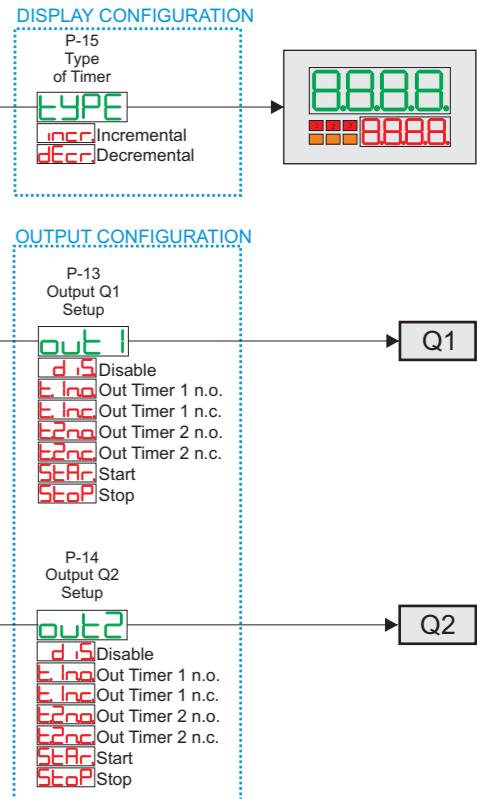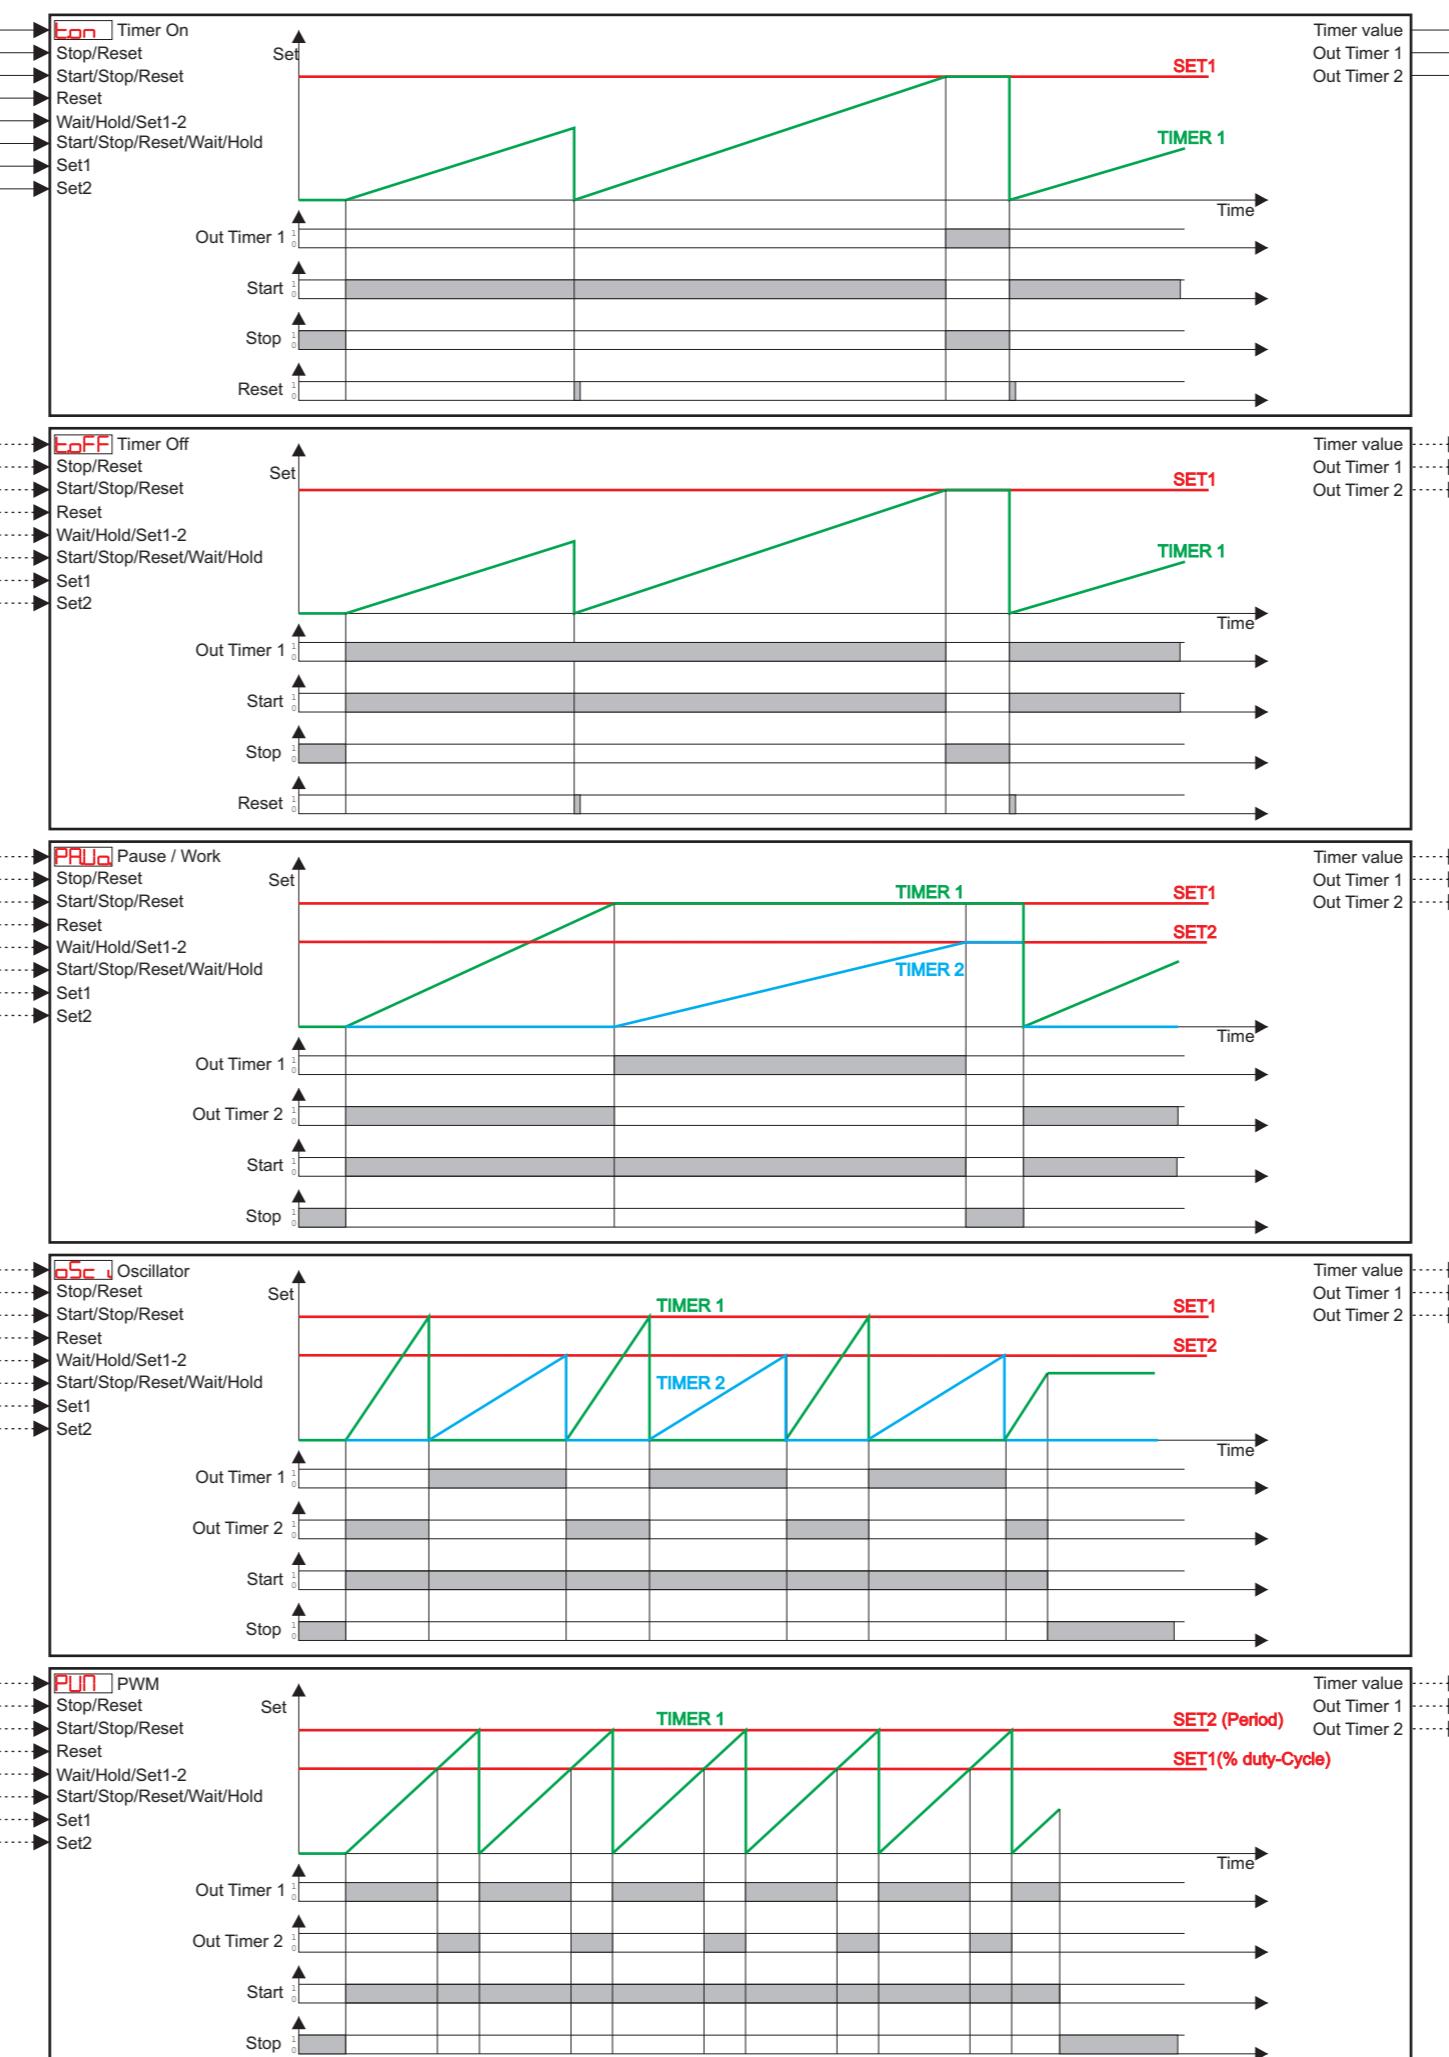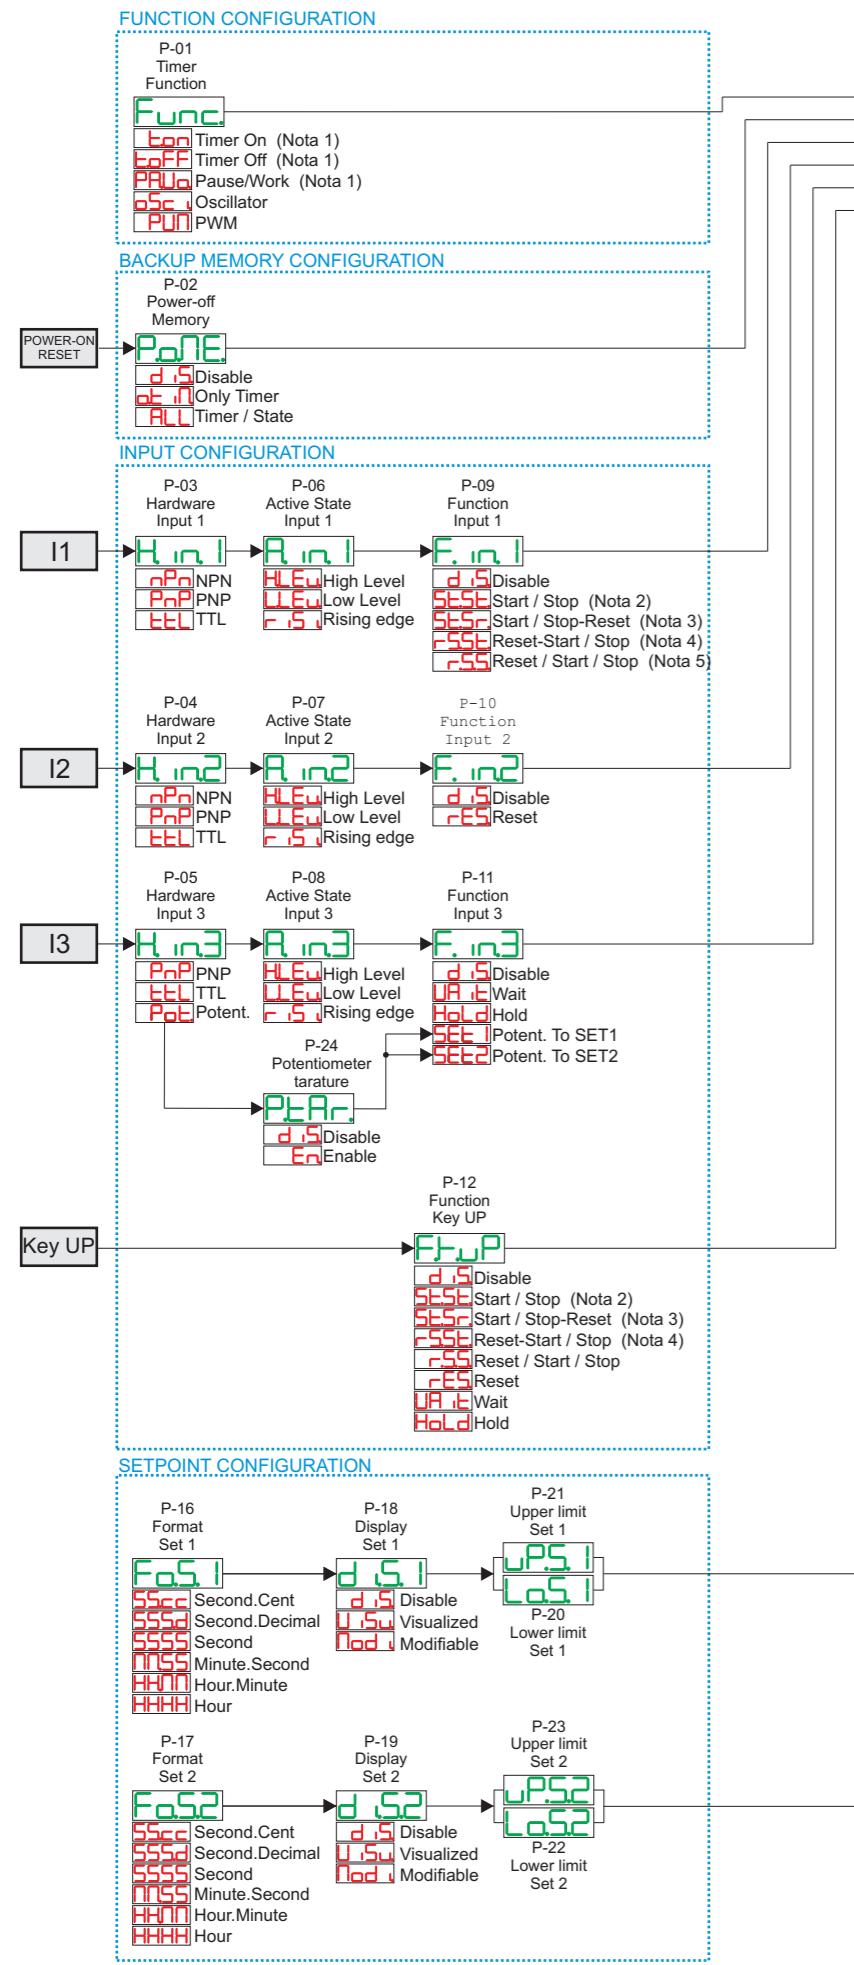

Input Type	NPN Input	PNP Input	TTL Input
Logic Level			
H	< 9,0 v	>12,3 v (I1, I2) >10,5 v (I3)	>2,9 v
L	> 10,5 v	< 11,0 v (I3)	< 2,4 v

**TABLE of ERROR MESSAGES**

<b>E-01</b>	ERROR in WRITING of EEPROM Memory
<b>E-02</b>	ERROR in READING of EEPROM Memory
<b>E-03</b>	Incorrect parameters (Note 1)
<b>E-04</b>	Incorrect calibration data (Note 1)
<b>E-05</b>	Incorrect status data (Note 1)
<b>E-06</b>	Incorrect BACKUP registers! (Note 2)

Note 1: Switch the device off and restart it; if error is still notified, contact technical service  
Note 2: Discharged battery: keep the device connected to power supply in order to recharge the battery.

▲ In PWM mode, the only option available on parameters 16 **Fo51** and 17 **Fo52** for format of SET1 and SET2 is **SSS** (seconds). Low and upper limits for SET1 (related to percentage of work or Duty Cycle) are allowed in the range 0 ... 100 (%). da 0 a 100 (%).


Nota 1: In this timer functioning, if P-06 Active State Input 1 = Rising Edge or P-09 Function Input 1 = Disable, at count end (reaching setpoint), timer will switch automatically to STOP.  
Nota 2: This function not reset timer value, and so it requires an input for the reset.  
Nota 3: This function reset timer at STOP.  
Nota 4: This function reset timer at START.  
Nota 5: This function è attiva solo se P-06 Active State Input 1 = Rising Edge



## TCT101-4ABC-T USER MANUAL

PIXSYS www.pixsys.net  
e-mail: sales@pixsys.net - support@pixsys.net  
Software V 2.08  
2300.10.140-RevH 240314

### SIZE AND INSTALLATION

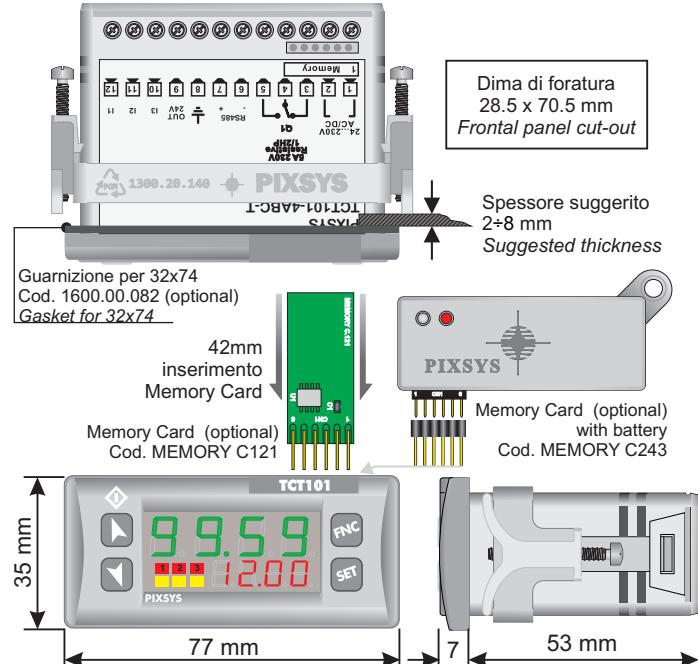

LED	MEANING
	Report the activation of Q1
	Report the activation of Q2
	Report serial transmission by the TCT101

### TECHNICAL DATA

<b>Operating temperature</b>	Operating temperature 0-40°C, humidity 35..95uR%
<b>Sealing</b>	Front panel IP65 (with optional gasket), Box IP30, Terminal blocks IP20
<b>Material</b>	PC ABS UL94V0 self-extinguishing
<b>Digital Inputs</b>	3PNP/NPN configurable as analogue for potentiometers. (max 28 Vdc in PNP mode)
<b>Outputs</b>	1 relays 5A resistive charge OUT 24V 30mA(24Vac),40mA(24 Vdc),60mA (110...230Vac)
<b>Serial</b>	RS485
<b>Back-UP</b>	Rechargeable battery, approx. 7days autonomy
<b>Programming</b>	Labsoftview 2.6 or later
<b>Software</b>	
<b>Power Supply</b>	24...230Vac/Vdc +/-15% 50/60Hz / 2W

### INTRODUCTION

Thanks for choosing a Pixsys device. TCT101-4ABC-T can be set in 3 different modes: **timer**, **counter** or **tachometer**. 3 universal digital inputs are available (NPN/PNP/Potential free contact) and can be used for reading external switches, proximity sensors and bidirectional encoders. One input is also analogue in order to allow setpoint modification by external potentiometer. Rs485 serial interface allows communication via Modbus RTU protocol.




Read carefully the safety guidelines and programming instructions contained in this manual before using/connecting the device.

Disconnect power supply before proceeding to hardware settings or electrical wirings.

Only qualified personnel should be allowed to use the device and/or service it and in accordance to technical data and environmental conditions listed in this manual.

Do not dispose electric tools together with household waste materials in observance of European Directive 2002/96/CE

### WIRING DIAGRAM

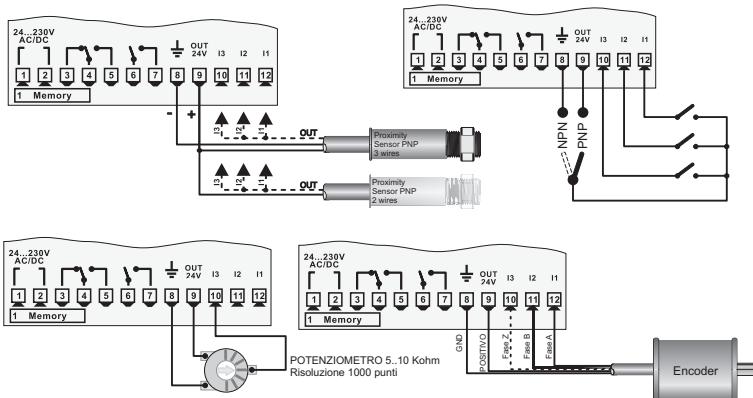

#### Potentiometer:

To modify Set1 or Set2 by external potentiometer follow the steps below:

- 1-use potentiometers 5kOhm to 10kohm
- 2-connect cursor to pin I3; a wrong connection may damage the potentiometer and lead to lock of the device.
- 3-accuracy on input is max 1000 points, therefore set the parameters "Upper limit" and "Lower limit" with a max difference of 1000 units.  
(Ex.: LoS1 to 50,0 and uPS1 to 150,0 to modify time value related to Set1 between 50 and 150 seconds with steps of one tenth). Greater differences would make unstable the less significant digit.
- 4-To calibrate the scale of potentiometer enter the configuration mode and select: Hin.3 as Pot Fin.3 as Set1 or Set2 P.tAr as Enable  
Exit configuration mode and place potentiometer at minimum level and press **SET** key, then place potentiometer at max level and press **PREMERE SET** key: the device automatically exit the calibration procedure.  
N.B.: A switch-off of the device would interrupt the calibration.



#### MEMORY CARD (optional)

Parameters and setpoint values can be copied from one device to another using the Memory car.

There are two methods:

- > **With the device connected to the power supply**  
insert the memory card **when the controller is off**.

On activation display 1 shows and display 2 shows **---**  
(Only if the values stored on Mmeory Card are correct).

By pressing the **SET** key display 2 shows **Load**

Confirm using the **SET** key .

The device loads the new data and starts again.

- > **With the controller disconnected from the power supply:**

The memory card is equipped with an internal battery with a life of about 1000 uses.

Insert the memory card and press the programming button.

When writing the parameters, the LED turns red and on completing the procedure it changes to green. It is possible to repeat the procedure.

#### △ UPDATING MEMORY CARD.

To update the memory card values, follow the procedure described in the first method, setting display 2 to **---** so as not to load the parameters on controller.

Enter configuration and **change at least one parameter**.

Exit configuration. Changes are saved automatically.

### SETPOINT MODIFICATION

#### PRESS

<b>1</b>	<b>SET</b>	Visualizes SETPOINT 1 / 2
<b>2</b>	<b>SET</b> or <b>SET</b>	Modifies selected SET
<b>2a</b>	<b>FNC</b>	Selects chosen digit
<b>3a</b>	<b>SET</b> or <b>SET</b>	Modifies blinking digit of selected SET

#### DISPLAY

#### PRESS

<b>1</b>	<b>FNC</b> for 3 seconds	Display 1 shows <b>0000</b> with 1st digit blinking, while Display 2 shows <b>PASS</b>
<b>2</b>	<b>SET</b> or <b>SET</b>	Modify blinking digit and pass to the next one pressing <b>SET</b>
<b>3</b>	<b>SET</b> to confirm	Instrument loads default settings

#### DISPLAY

#### DO

### CONFIGURATION PARAMETER MODIFICATION

#### PRESS

<b>1</b>	<b>FNC</b> for 3 seconds	Display 1 shows <b>0000</b> with 1st digit blinking, while Display 2 shows <b>PASS</b>
<b>2</b>	<b>SET</b> or <b>SET</b>	Modify blinking digit and pass to the next one pressing <b>SET</b>
<b>3</b>	<b>SET</b> to confirm	Display visualizes the first parameter of configuration table <b>Func</b>
<b>4</b>	<b>SET</b> or <b>SET</b>	Scroll parameters
<b>5</b>	<b>SET</b> + <b>SET</b> or <b>SET</b>	Increase or decrease visualized parameter pressing <b>SET</b> and an arrow key
<b>6</b>	<b>FNC</b>	Enter new data that will be saved when releasing keys
		End configuration, controller exits from configuration

#### DISPLAY

#### DO

### SERIAL COMMUNICATION

TCT101-4ABC-T is provided with RS485 serial and can receive / transmit data via MODBUS RTU protocol. Device can be configured only as Slave. This function allows to control multiple controllers connected to a supervisory system (Master). Each instrument will answer to a Master query only if it contains some addresses as on parameter **SLAd** (Slave Address).

Allowed addresses range are from 1 to 254 and there should not be controllers with the same address on the same line.

Address 255 can be used by the Master to communicate with all connected equipments (all connected devices will answer Master query with this address), while with 0 all devices receive command, but no answer is expected (broadcast mode).

TCT101-4ABC-T can introduce an answer delay (in milliseconds) to Master request. This delay has to be set on parameter **SEDE** (Serial Delay).

At each parameter modification, instrument stores values in EEPROM memory (100000 writing cycles).

NB: Modifications made to Word different to those described in the following table can lead to instrument malfunction.

### MODBUS RTU PROTOCOL MAIN FEATURES

Baudrate	Selectable by parameter
Format	8,N,1 (8 bit data, no parity, 1 stop bit)
Supported functions	WORD READING (0x03, 0x04) (max 20 word) SINGLE WORD WRITING (0x06) MULTIPLE WORDS WRITING (0x10) (max 20 word)
Read/Write	RO Read Only WO Write Only RW Read / Write
Reset Value	? EEPROM Valore Data unknown at reset Value stored on EEPROM Value indicated at reset

### PARAMETERS LIST

TCT101-4ABC-T allows to select operating mode, modifying first configuration parameter. According to chosen mode, only the relevant parameters will be displayed.

Refer to technical notes of each mode to find parameters list.

### TCT101 MODE CONFIGURATION

<b>Node</b>	<b>P-00 Mode</b>	TCT101 operating mode selection
<b>cont</b>	<b>Counter</b>	TCT101 operating as counter
<b>Erch</b>	<b>Tachometer</b>	TCT101 operating as tachometer
<b>Time</b>	<b>Timer</b>	TCT101 operating as timer Default

Here below you can find parameters to set serial port and Modbus protocol, independently from selected operating mode.

### SERIAL CONFIGURATION

<b>SLAd</b>	<b>P-50 Slave Address</b>	Device Modbus address
<b>1</b>	Slave n°1	Modbus 1 address Default
	...	
<b>254</b>	Slave n° 254	Modbus 254 address
<b>bdr</b>	<b>P-51 Baudrate</b>	Serial communication speed
<b>110</b>	110 baud	110 b/s communication
<b>150</b>	150 baud	150 b/s communication
<b>300</b>	300 baud	300 b/s communication
<b>600</b>	600 baud	600 b/s communication
<b>1200</b>	1200 baud	1200 b/s communication
<b>2400</b>	2400 baud	2400 b/s communication
<b>4800</b>	4800 baud	4800 b/s communication
<b>9600</b>	9600 baud	9600 b/s communication
<b>19200</b>	19200 baud	19200 b/s communication Default
<b>28800</b>	28800 baud	28800 b/s communication
<b>38400</b>	38400 baud	38400 b/s communication
<b>57600</b>	57600 baud	57600 b/s communication
<b>FoSE</b>	<b>P-52 Format Serial</b>	Serial data format
<b>8n1</b>	8 bit, parity none, 1 stop	8 data bit, no parity, 1 stop bit Default
<b>SEDE</b>	<b>P-53 Serial Delay</b>	Serial delay
<b>0</b>	0 ms	Slave answer after 0 ms
	...	Default 2ms
<b>100</b>	100 ms	Slave answer after 100 ms

## PARAMETERS LIST

### FUNCTION CONFIGURATION

Func	P-01 Timer Function	Timer functions	
ton	Timer On	Activates output at count end	Default
toFF	Timer Off	Deactivates output at count end	
PAW	Pause/Work	T1 and T2 start in sequency	
osc	Oscillator	T1 and T2 start in sequency repeatedly	
PUN	PWM	Percentage output activation on fixed time base	

### BACKUP MEMORY CONFIGURATION

func	P-02 Power-off Memory	Power-off memory	
dS	Disabled	Disabled	Default
oT	Only Timer	Only timer value in memory	
ALL	Timer / State	Timer value and START/STOP status in memory	

### INPUT CONFIGURATION

in	P-03 Hardware Input 1	Input 1 configuration	
nPN	NPN	NPN	
PnP	PNP	PNP	Default
TTL	TTL	TTL	

in	P-04 Hardware Input 2	Input 2 configuration	
nPN	NPN	NPN	
PnP	PNP	PNP	Default
TTL	TTL	TTL	

in	P-05 Hardware Input 3	Input 3 configuration	
PnP	PNP	PNP	Default
TTL	TTL	TTL	
Pat.	Potentiometer		

in	P-06 Active State Input 1	Input 1 activation	
HLe	High Level	High level	
LEl	Low Level	Low level	
rSi	Rising edge	Transitory in rising	Default

in	P-07 Active State Input 2	Input 2 activation	
HLe	High Level	High level	
LEl	Low Level	Low level	
rSi	Rising edge	Transitory in rising	Default

in	P-08 Active State Input 3	Input 3 activation	
HLe	High Level	High level	
LEl	Low Level	Low level	
rSi	Rising edge	Transitory in rising	Default

in	P-09 Function Input 1	Input 1 function	
dS	Disable	Disabled	
SESE	Start / Stop	Start / Stop	Default
SES	Start / Stop-Reset	Start / Stop-Reset	
FSSE	Reset-Start / Stop	Reset-Start / Stop	
FSS	Reset / Start / Stop	Reset / Start / Stop	

in	P-10 Function Input 2	Input 2 function	
dS	Disable	Disabled	
rES	Reset	Reset	Default

in	P-11 Function Input 3	Input 3 function	
dS	Disable	Disabled	
WE	Wait	Wait (count lock)	
HoLd	Hold	Hold (lock the display but count continues)	Default
SET1	Potent. To SET1	Variation by potentiometer on SET1	
SET2	Potent. To SET2	Variation by potentiometer on SET2	

in	P-12 Function Key UP	Function on key	
dS	Disable	Disabled	Default
SESE	Start / Stop	Start / Stop	
SES	Start / Stop-Reset	Start / Stop-Reset	
FSSE	Reset-Start / Stop	Reset-Start / Stop	
FSS	Reset / Start / Stop	Reset / Start / Stop	
rES	Reset	Reset	
WE	Wait	Wait (count lock)	
HoLd	Hold	Hold (lock the display but count continues)	

out	P-13 Output Q1 Setup	Output Q1 selection	
dS	Disable	Disabled	
t1n	Out Timer 1 n.o.	Timer Output 1 n.o.	Default
t1nc	Out Timer 1 n.c.	Timer Output 1 n.c.	
t2n	Out Timer 2 n.o.	Timer Output 2 n.o.	
t2nc	Out Timer 2 n.c.	Timer Output 2 n.c.	
StAr	Start	Start	
StOp	Stop	Stop	




out	P-14 Output Q2 Setup	Output Q2 selection	
dS	Disable	Disabled	Default
t1n	Out Timer 1 n.o.	Timer Output 1 n.o.	
t1nc	Out Timer 1 n.c.	Timer Output 1 n.c.	
t2n	Out Timer 2 n.o.	Timer Output 2 n.o.	
t2nc	Out Timer 2 n.c.	Timer Output 2 n.c.	
StAr	Start	Start	
StOp	Stop	Stop	

out	P-15 Type of Timer	Count mode	
incr	Incremental	Incremental	Default
decr	Decremental	Decremental	

## MODBUS WORD ADDRESSES IN TIMER MODE

Modbus Address	Description	Read Write	Reset Value
500	Timer H value	RO	?
501	Timer L value	RO	?
502	Timer value / 60	RO	?
503	Module 60 timer value	RO	?
504	Timer status - 0 timer in stop - 1,2 timer in start	RO	?
505	Active timer - 0 no active timer - 1 timer 1 active - 2 timer 2 active	RO	?
506	Timer logic outputs - bit 0 timer 1 logic output - bit 1 timer 2 logic output	RO	?
507	Wait Hold timer status - bit 0 Wait status - bit 1 Hold status	RO	?
508	Timer serial command done	RO	?
509	Timer in Hold	RO	?
510	Hold H timer value	RO	?
511	Hold L timer value	RO	?
512	Hold / 60 timer value	RO	?
513	Hold module 60 timer value	RO	?
514	Partial minutes (only for timer in hours)	RO	?
530	Timer serial command - 0 no command - 1 start timer command - 2 stop timer command - 3 reset timer command - 4 reset start timer command - 5 stop reset timer command - 6 enables/ disables wait timer function command - 7 enables/ disables hold timer function command	WO	0
1000	Parameter P-00	RW	EEPROM
1001	Parameter P-01	RW	EEPROM
1002	Parameter P-02	RW	EEPROM
	...	RW	EEPROM
1052	Parameter P-52	RW	EEPROM
1053	Parameter P-53	RW	EEPROM

# TCT101-4ABC-T "TIMER" MODE

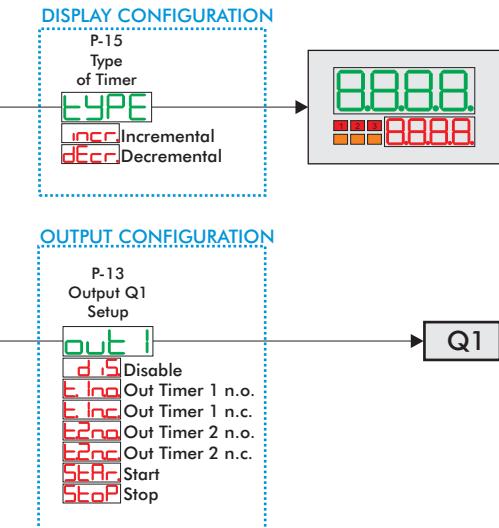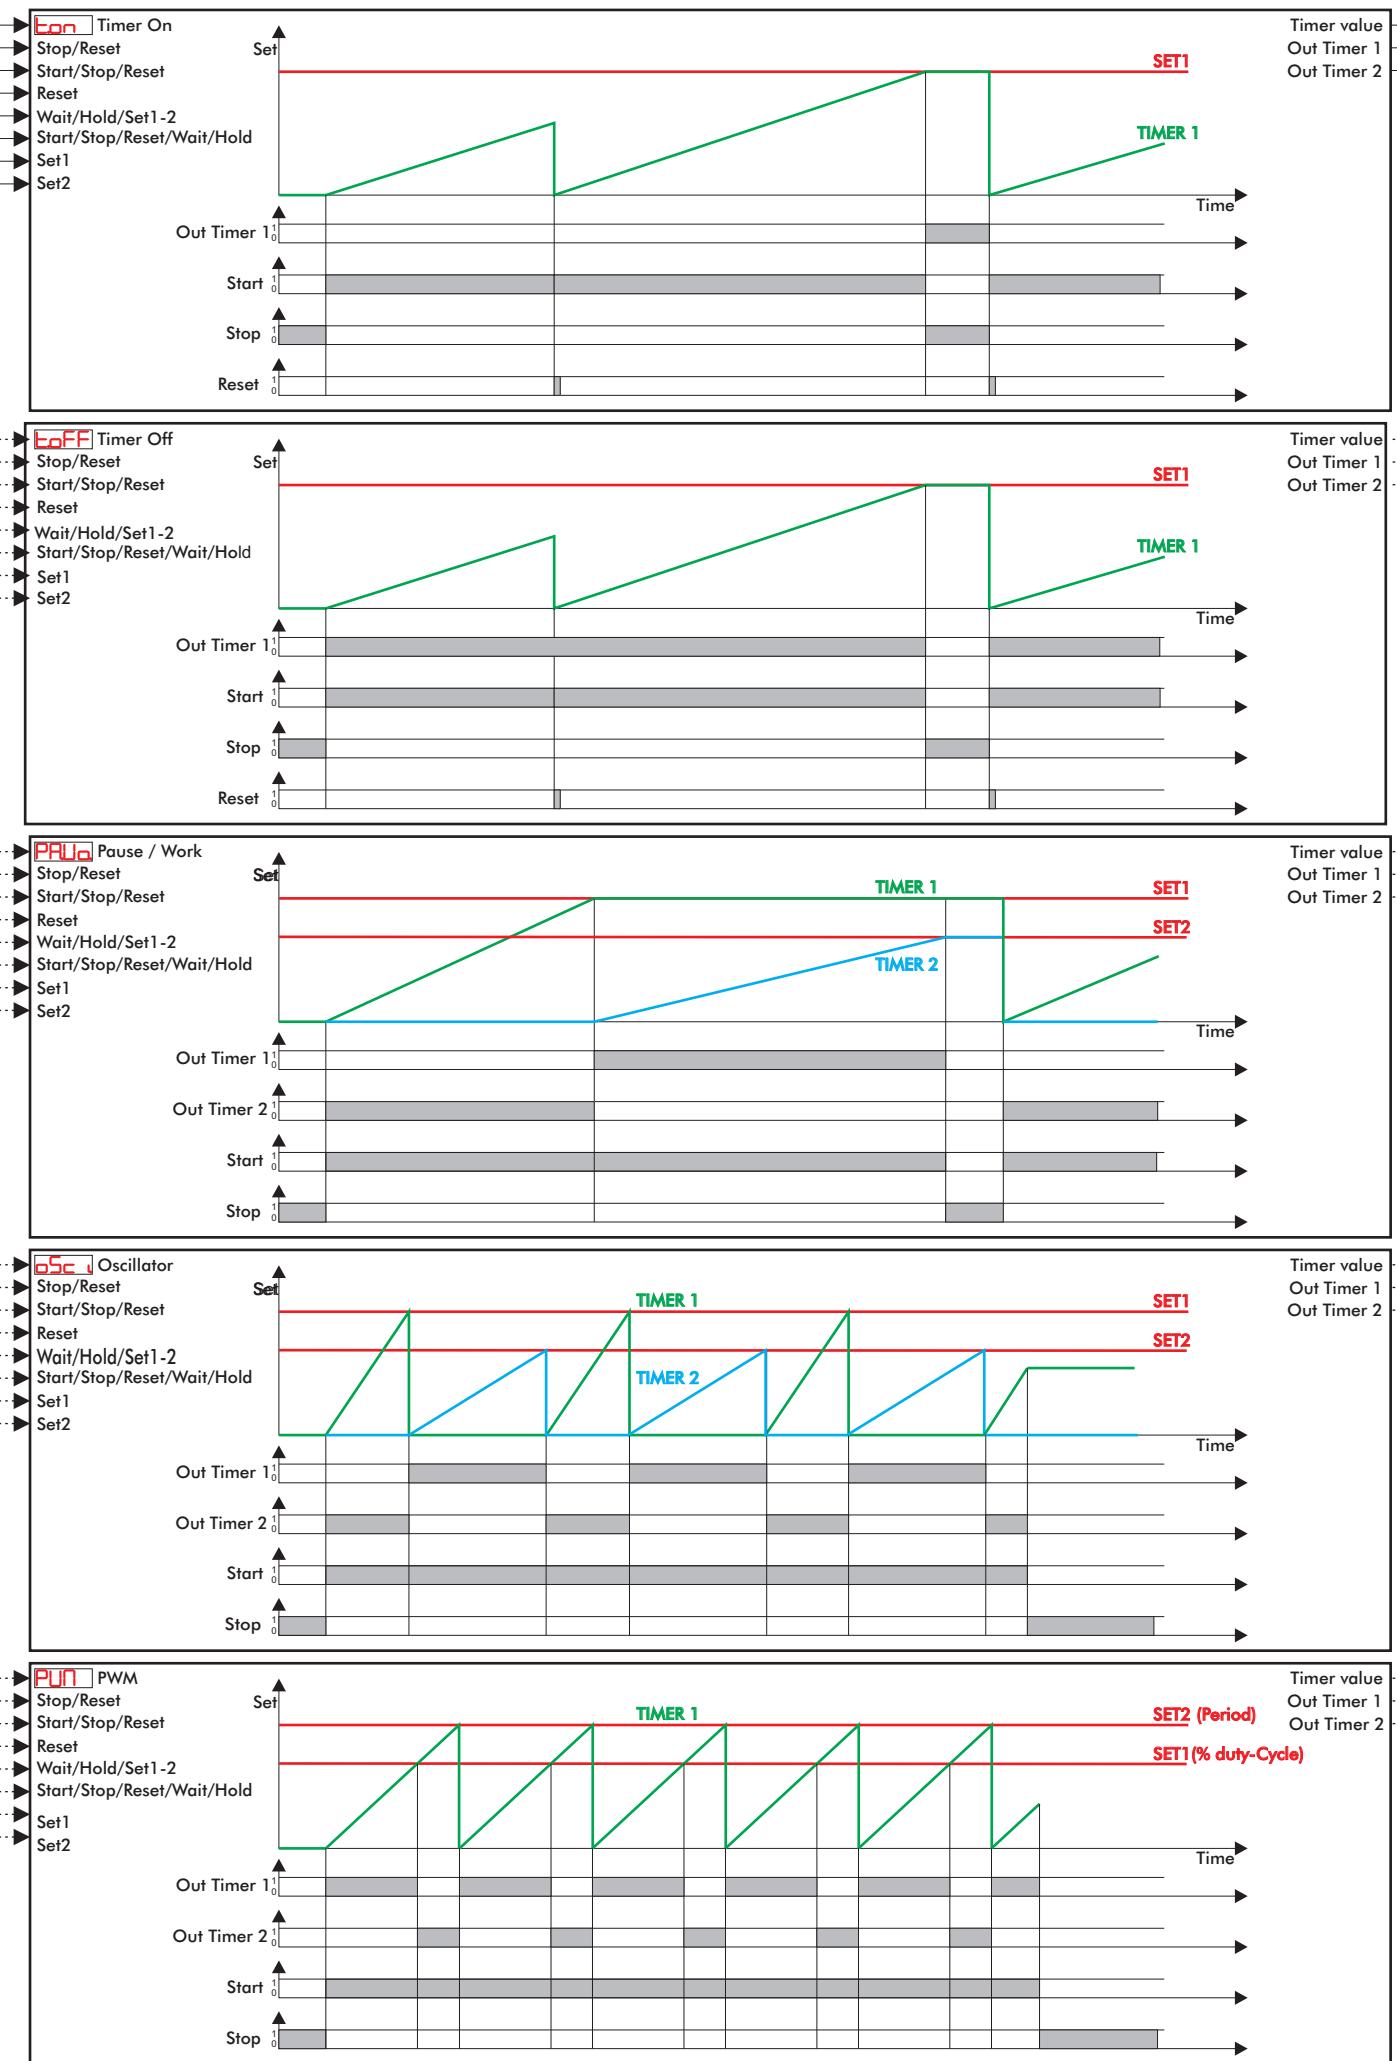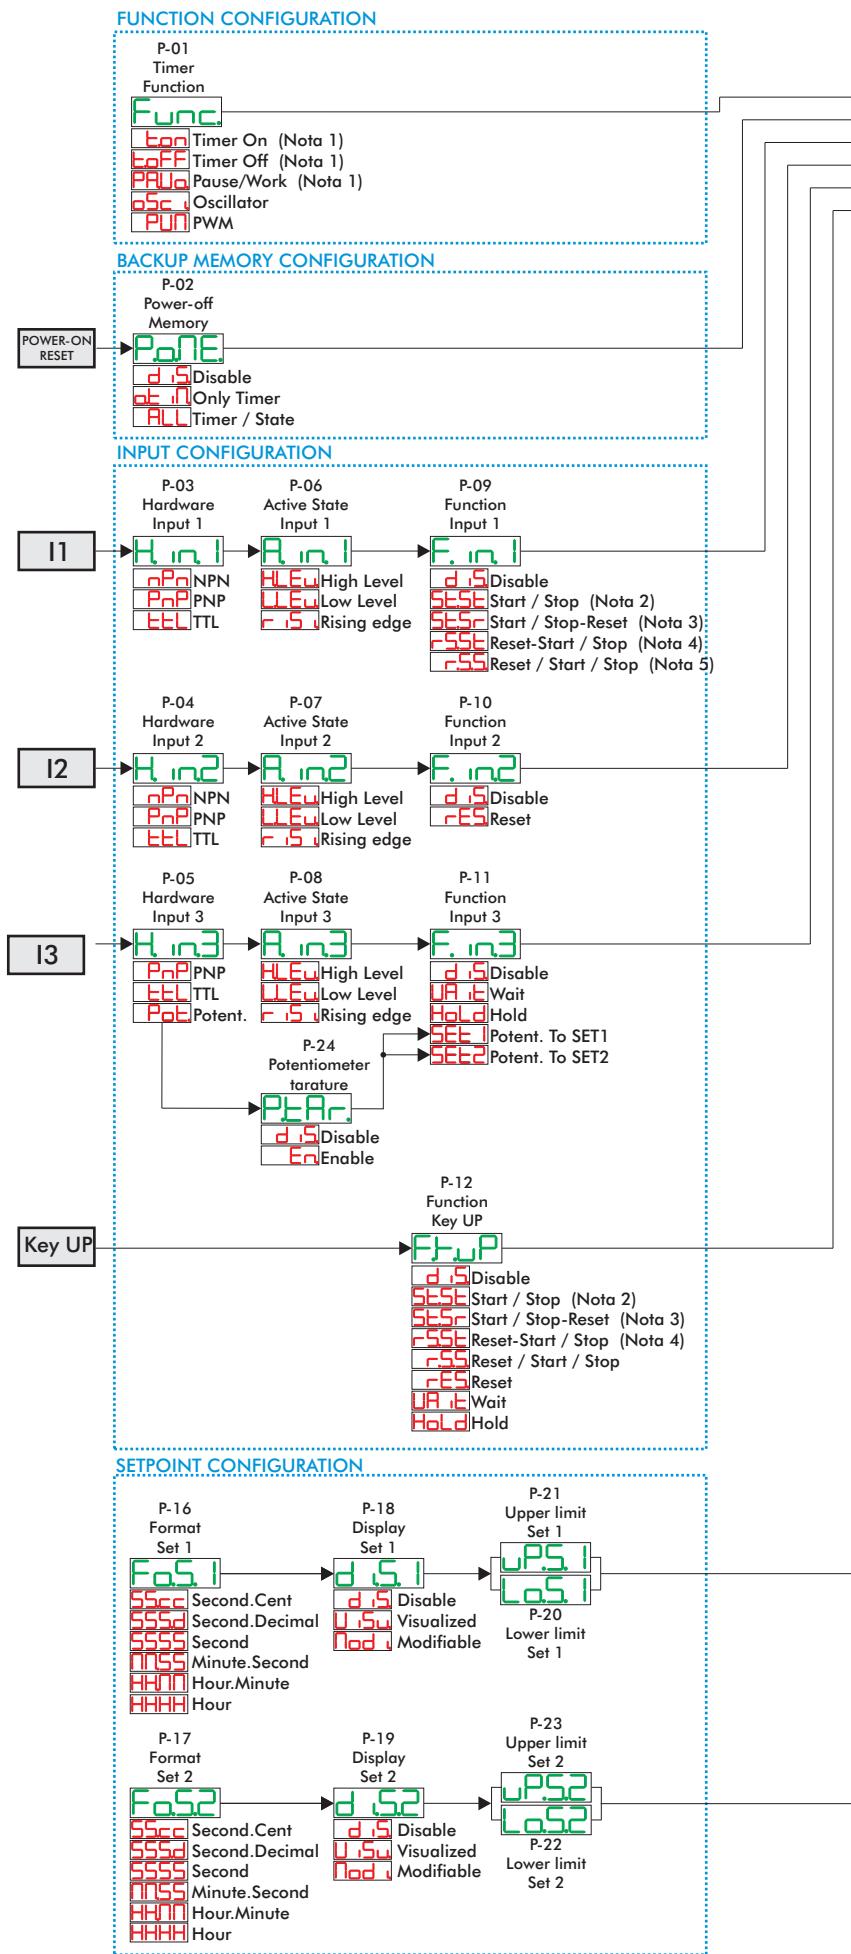

Type of input	NPN input	PNP input	TTL input
H	< 4,7 v (I1, I2)	> 5,7 v	> 12,4 v (I3)
L	> 4,7 v (I1, I2)	< 4,7 v	< 10,2 v (I3)
			> 2,5 v
			< 2,0 v

**TABLE OF ERROR MESSAGES**

E-01	ERROR IN WRITING OF EEPROM MEMORY (Note 6)
E-02	ERROR IN READING OF EEPROM MEMORY (Note 6)
E-03	INCORRECT PARAMETERS (Note 6)
E-04	INCORRECT CALIBRATION DATA (Note 6)
E-05	INCORRECT STATUS DATA (Note 6)
E-06	INCORRECT BACKUP REGISTERS (Note 7)

Note 6: SWITCH THE DEVICE OFF AND RESTART IT; IF ERROR IS STILL NOTIFIED, CONTACT TECHNICAL SERVICE.  
Note 7: DISCHARGED BATTERY. KEEP THE DEVICE CONNECTED TO THE POWER SUPPLY IN ORDER TO RECHARGE THE BATTERY.

! In PWM mode, selection of parameters 16 **Fo51** and 17 **Fo52** (SET1 and SET2) is limited at **SSSS** (seconds). Min. and Max. SET1 limit (lied to working percentage or Duty Cycle) is limited into a range from 0 to 100 (%).

Note 1: In this timer functioning, if P-06 Active State Input 1 = Rising Edge or P-09 Function Input 1 = Disabled, at count end (reaching of set), timer automatically STOP.  
Note 2: This function doesn't reset timer value and needs an input for the reset.  
Note 3: This function resets timer at STOP.  
Note 4: This function resets timer at START.  
Note 5: This function is active only if P-06 Active State Input 1 = Rising Edge

## PARAMETERS LIST

### FUNCTION CONFIGURATION


<b>P-01 Counter Function</b>	Counter functions	
<b>SinG</b>	Single (1 Counter)	1 counter functioning
<b>doub</b>	Double (2 Counters)	2 counters functioning
<b>BACKUP MEMORY CONFIGURATION</b>		
<b>PoE</b>	<b>P-02 Power-off Memory</b>	Power-off memory
<b>d.S</b>	Disable	No counter stored at switch-off
<b>cnt1</b>	Counter 1	Counter 1 stored at switch-off
<b>cnt2</b>	Counter 2	Counter 2 stored at switch-off
<b>All</b>	All Counters	All counters stored at switch-off
<b>INPUT CONFIGURATION</b>		
<b>H.in1</b>	<b>P-03 Hardware input 1</b>	Input 1 hardware configuration
<b>H.in2</b>	<b>P-04 Hardware input 2</b>	Input 2 hardware configuration
<b>H.in3</b>	<b>P-05 Hardware input 3</b>	Input 3 hardware configuration
<b>nPN</b>	NPN	NPN (not available on input 3)
<b>PnP</b>	PNP	Default
<b>TTL</b>	TTL	
<b>Pot.</b>	Potent.	Potentiometro (available only on input 3)
<b>F.I.L.</b>	<b>P-06 Filter Delay Input 1</b>	Digital input 1 filter configuration
<b>F.I.D.</b>	<b>P-07 Filter Delay Input 2</b>	Digital input 2 filter configuration
<b>F.I.T.</b>	<b>P-08 Filter Delay Input 3</b>	Digital input 3 filter configuration
<b>NO</b>	No delay	Input filter disabled
<b>0,5</b>	0,5 ms	0,5 ms filter
<b>...</b>	...	(Step 0,5 ms)
<b>1000</b>	100,0 ms	100,0 ms filter
<b>A.in1</b>	<b>P-09 Active State Input 1</b>	Input 1 active state
<b>A.in2</b>	<b>P-10 Active State Input 2</b>	Input 2 active state
<b>A.in3</b>	<b>P-11 Active State Input 3</b>	Input 3 active state
<b>HLEu</b>	High Level	High level (only for input 2)
<b>LLLe</b>	Low Level	Low level (only for input 2)
<b>r.S</b>	Rising edge	Rising edge
<b>FALL</b>	Falling edge	Falling edge
<b>F.in3</b>	<b>P-12 Function Input 3</b>	Input 3 related function
<b>d.S</b>	Disable	Disabled
<b>Enc2</b>	Encoder Z	Phase Z encoder loading
<b>Ld1</b>	Load Counter 1	Counter 1 loading
<b>Ld2</b>	Load Counter 2	Counter 2 loading
<b>Ld12</b>	Load Counter 1&2	Counters 1 and 2 loading
<b>SET1</b>	Set1	Set 1 setting by potentiometer
<b>SET2</b>	Set2	Set 2 setting by potentiometer
<b>F.up</b>	<b>P-13 Function Key UP</b>	UP (up arrow key)
<b>d.S</b>	Disable	Disabled
<b>Ld1</b>	Load Counter 1	Counter 1 loading
<b>Ld2</b>	Load Counter 2	Counter 2 loading
<b>Ld12</b>	Load Counter 1&2	Counters 1 and 2 loading
<b>Ptar</b>	P-14 Potentiom. Tarature	Potentiometer calibration procedure
<b>d.S</b>	Disable	Disabled
<b>En</b>	Enable	Enabled
<b>COUNTER CLOCK CONFIGURATION</b>		
<b>CLC1</b>	<b>P-15 Clock Counter 1</b>	Counter 1 count mode selection
<b>CLC2</b>	<b>P-33 Clock Counter 2</b>	Counter 2 count mode selection
<b>d.S</b>	Disable	Disabled
<b>Enc</b>	Encoder	Bidirectional encoder (I1) phase A, (I2) phase B
<b>uP--</b>	I1 Up, I2 Off	UP mode (I1)
<b>da--</b>	I1 Down, I2 Off	DOWN mode (I1)
<b>--uP</b>	I1 Off, I2 Up	UP mode (I2)
<b>--da</b>	I1 Off, I2 Down	DOWN mode (I2)
<b>uPd</b>	I1 Up, I2 Down	UP (I1) - DOWN mode (I2)
<b>uP.d</b>	I1 Up, I2 Incr./Decr.	UP mode (I1) with reverse direction (I2)
<b>uPEL</b>	I1 Up, I2 En./Lock	UP mode (I1) with count lock (I2)
<b>uPEH</b>	I1 Up, I2 En./Hold	UP mode (I1) with keeping value on display (I2)
<b>doEL</b>	I1 Down, I2 En./Lock	DOWN mode (I1) with count lock (I2)
<b>doEH</b>	I1 Down, I2 En./Hold	DOWN mode (I1) with keeping value on display (I2)
<b>oc2</b>	Output Counter 2/1	UP count on rising edge of counter 2/1 output
<b>COUNTER DISPLAY CONFIGURATION</b>		
<b>d1</b>	<b>P-16 Display Counter 1</b>	Counter 1 visualization selection
<b>d2</b>	<b>P-34 Display Counter 2</b>	Counter 2 visualization selection
<b>d.S</b>	Disable	Counter value not visualized
<b>U.Su</b>	Visualized	Counter value visualized
<b>dPC1</b>	<b>P-17 Decimal Point Counter 1</b>	Counter 1 visualization format
<b>dPC2</b>	<b>P-35 Decimal Point Counter 2</b>	Counter 2 visualization format
<b>0</b>	0	Visualization with no decimal digit
<b>0,0</b>	0,0	Visualization with 1 decimal digit
<b>0,00</b>	0,00	Visualization with 2 decimal digits
<b>0,000</b>	0,000	Visualization with 3 decimal digits
<b>inf1</b>	<b>P-18 Counter 1 input counts</b>	Counter 1 input counts (1...9999)
<b>inf2</b>	<b>P-36 Counter 2 input counts</b>	Counter 2 input counts (1...9999)
<b>uF1</b>	<b>P-19 Counter 1 Visualized Counts</b>	Counter 1 visualized counts (1...9999)
<b>uF2</b>	<b>P-37 Counter 2 Visualized Counts</b>	Counter 2 visualized counts (1...9999)

## MODBUS WORD ADDRESSES IN COUNTER MODE

Modbus Address	Description	Read Write	Reset Value
600	Counter 1 H value	RO	?
601	Counter 1 L value	RO	?
602	Counter 1 H counts	RO	?
603	Counter 1 L counts	RO	?
604	Counter 1 logic output - bit 0 Counter 1 logic output	RO	?
605	Counter 1 Lock Hold status - bit 0 lock function status - bit 1 hold function status	RO	?
606	Counter 1 count direction - 0 normal count direction - 1 reverse count direction	RO	?
607	Counter 1 serial command done Shows value of the last serial command done	RO	0
608	Counter 1 H hold value	RO	?
609	Counter 1 L value	RO	?
610	Counter 1 H frequency (Hz)	RO	?
611	Counter 1 L frequency (Hz)	RO	?
612	Counter 1 H frequency value	RO	?
613	Counter 1 L frequency value	RO	?
620	Counter 1 serial command - 0 no command - 1 load command - 2 enable/disable lock function - 3 enable/disable hold function - 4 reverse count direction - 5 Enter onward count - 6 Enter backward count	WO	0
630	Counter 2 H value	RO	?
631	Counter 2 L value	RO	?
632	Counter 2 H counts	RO	?
633	Counter 2 L counts	RO	?
634	Counter 2 logic output	RO	?
635	Counter 2 Lock Hold status	RO	?
636	Counter 2 count direction	RO	?
637	Counter 2 serial command done	RO	0
638	Counter 2 H Hold value	RO	?
639	Counter 2 L Hold value	RO	?
640	Counter 2 H frequency (Hz)	RO	?
641	Counter 2 L frequency (Hz)	RO	?
642	Counter 2 H frequency value	RO	?
643	Counter 2 L frequency value	RO	?
650	Counter 2 serial command	WO	0
2000	Parameter P-00	RW	EEPROM
2001	Parameter P-01	RW	EEPROM
2002	Parameter P-02	RW	EEPROM
...		RW	EEPROM
2052	Parameter P-52	RW	EEPROM
2053	Parameter P-53	RW	EEPROM

# TCT101-4ABC-T

## “COUNTER”

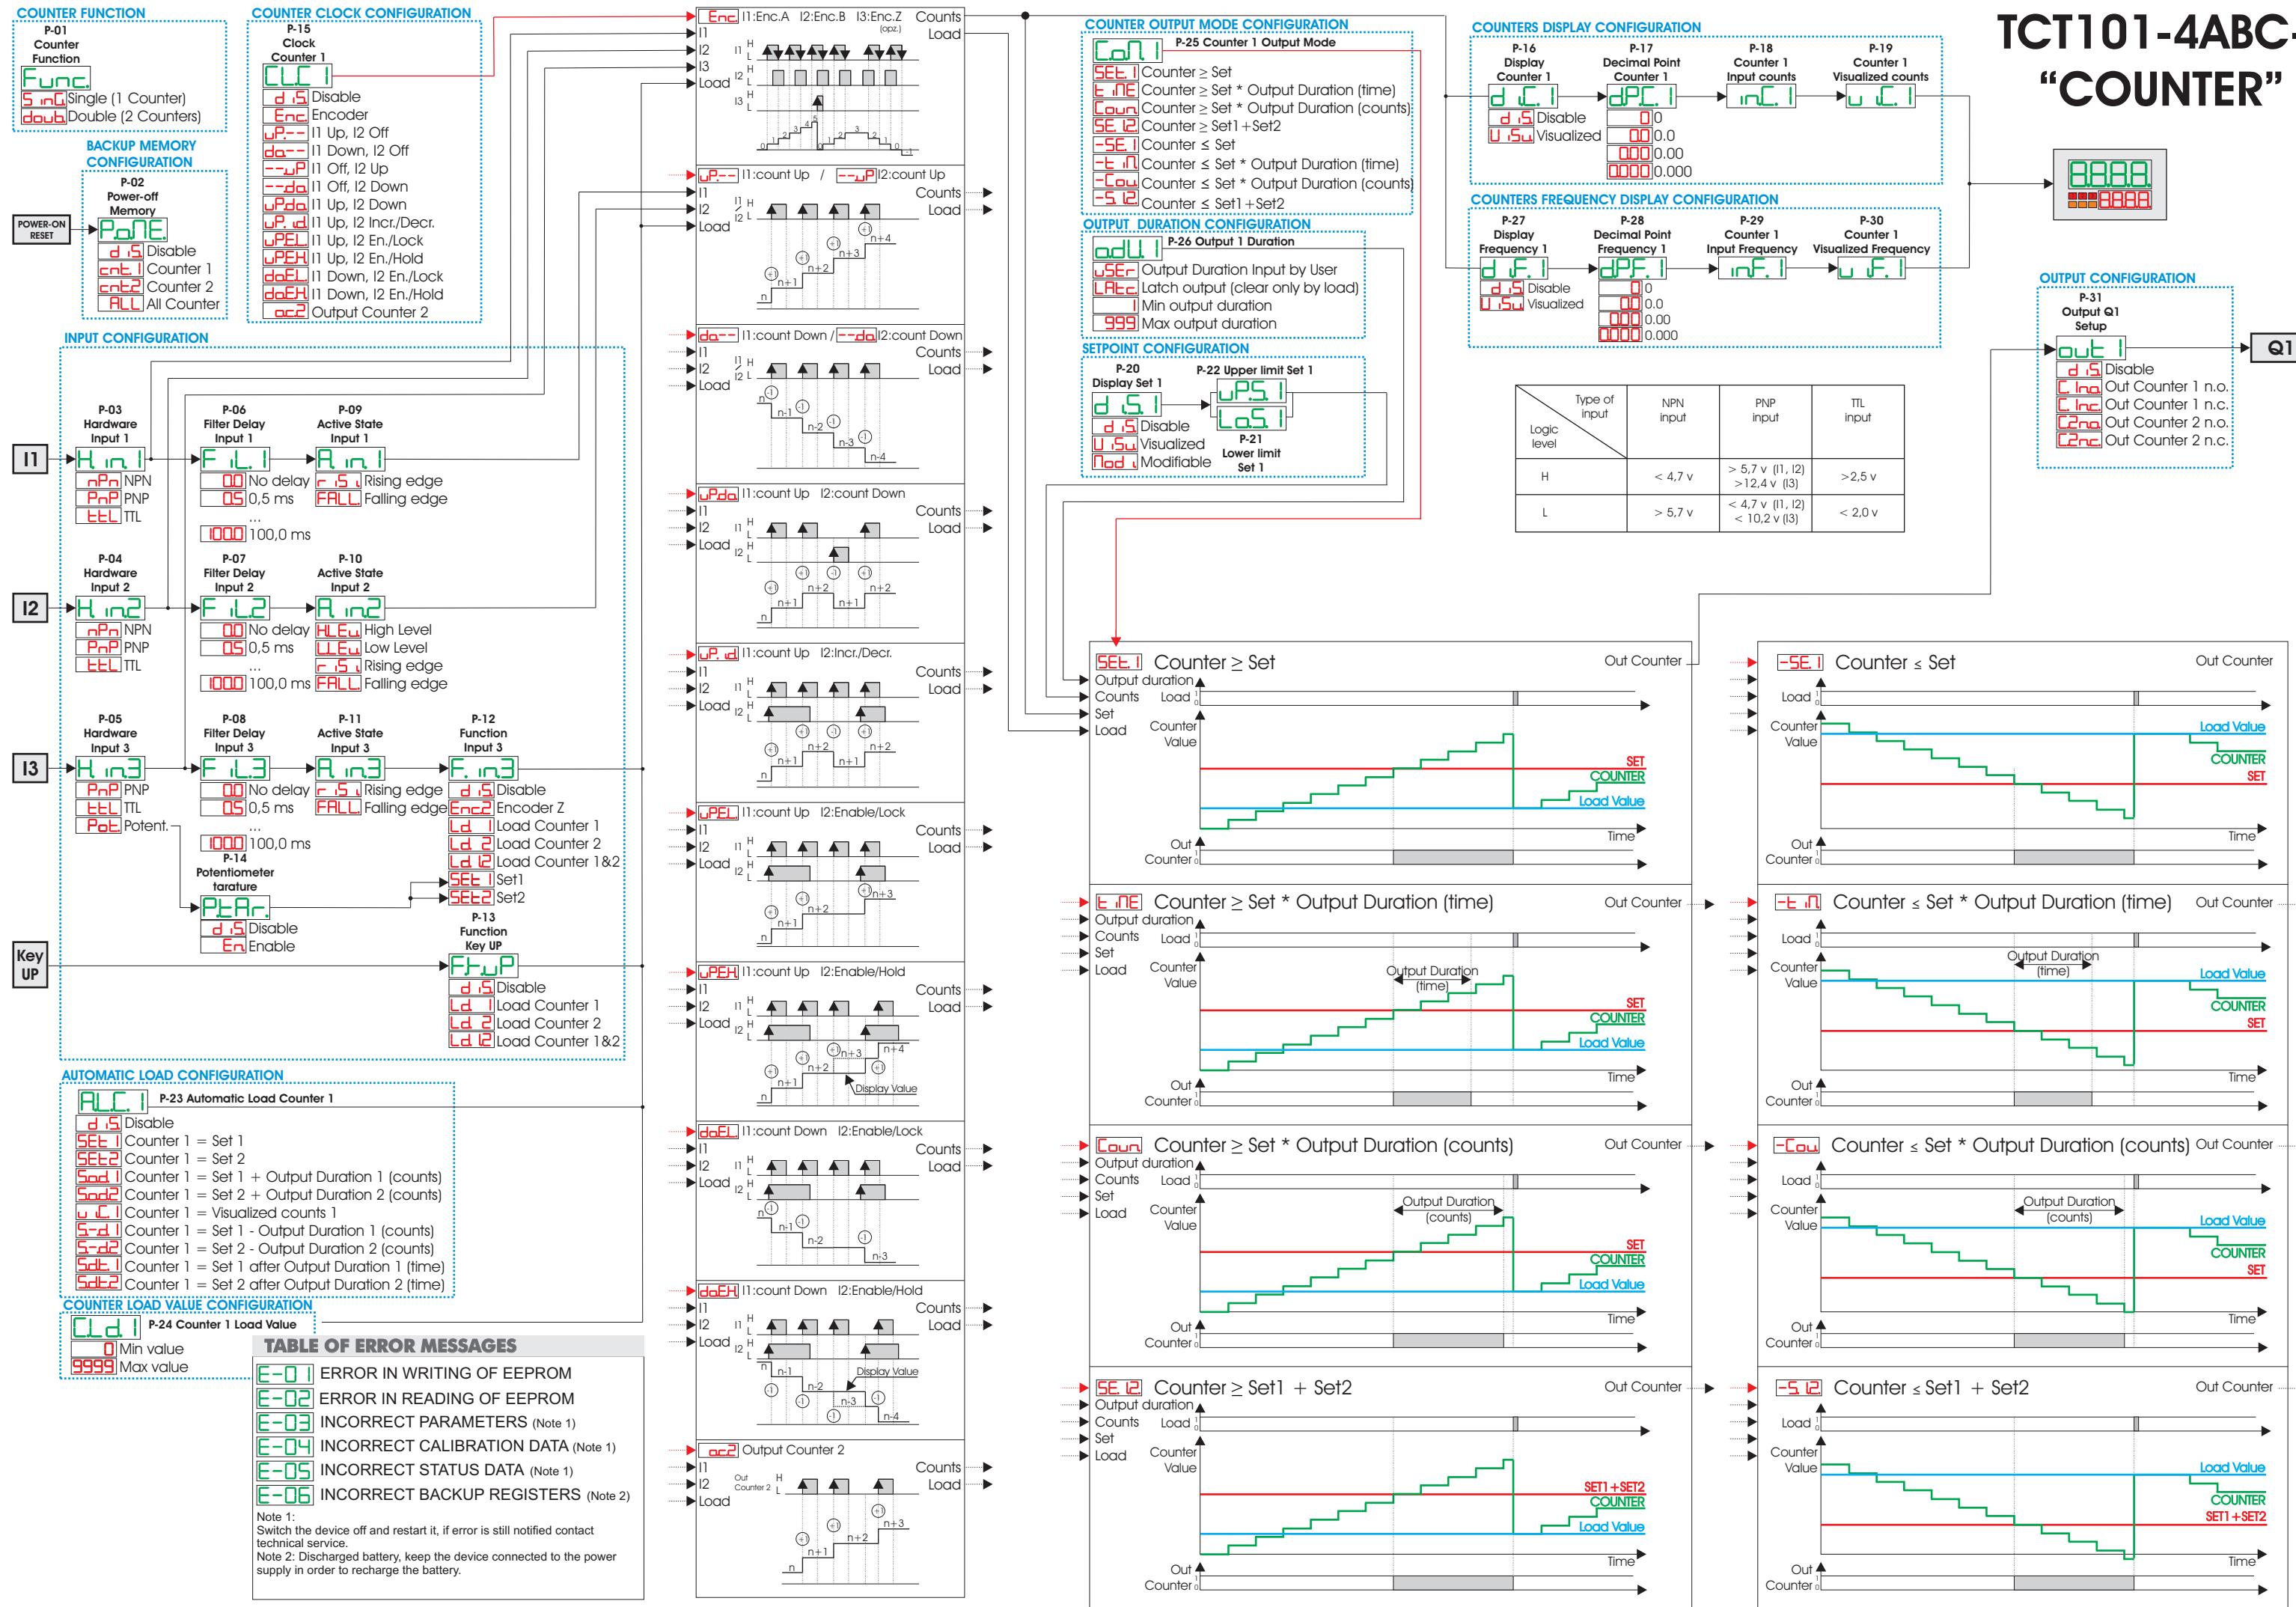

## PARAMETERS LIST

### CLOCK INPUT CONFIGURATION

<b>P-01 Clock Input</b>	<b>Input signal selection</b>	
<i>I1</i>	Input signal on I1	Default
<i>Enc</i>	Encoder	Input signal on I1 and I2 (bidirectional encoder)

### INPUT CONFIGURATION

<b>P-02 Hardware input 1</b>	<b>Input 1 hardware configuration</b>	
<b>P-03 Hardware input 2</b>	<b>Input 2 hardware configuration</b>	
<b>P-04 Hardware input 3</b>	<b>Input 3 hardware configuration</b>	
<i>nPN</i>	NPN	NPN (not available on input 3)
<i>PnP</i>	PNP	Default
<i>TTL</i>	TTL	
<i>Pot.</i>	Potent.	Potentiometer (available only on input 3)

<b>P-05 Filter Input 1</b>	<b>Input 1 hardware filter configuration</b>	
<i>Off</i>	Input hardware filter disabled	Default
<i>On</i>	Input hardware filter enabled (22nF)	

<b>P-06 Active State Input 2</b>	<b>Input 2 active status</b>	
<i>HLe</i>	High Level	High level
<i>LLe</i>	Low Level	Low level

<b>P-08 Function Input 2</b>	<b>Function associated to input 2</b>	
<i>dS</i>	Disable	Disabled
<i>outE</i>	Out Enable/Disable	Tachometer outputs enabled
<i>Hold</i>	Hold (solo per I3)	Hold of visualized tachometer value
<i>SEE1</i>	Set1 (solo per I3)	Set1 setting by potentiometer
<i>SEE2</i>	Set2 (solo per I3)	Set2 setting by potentiometer

<b>P-09 Function Input 3</b>	<b>Function associated to input 3</b>	
<i>dS</i>	Disable	Disabled
<i>outE</i>	Out Enable/Disable	Tachometer outputs enabled
<i>Hold</i>	Hold (solo per I3)	Hold of visualized tachometer value
<i>SEE1</i>	Set1 (solo per I3)	Set1 setting by potentiometer
<i>SEE2</i>	Set2 (solo per I3)	Set2 setting by potentiometer

<b>P-10 Potiom. Tarature</b>	<b>Potentiometer calibration function</b>	
<i>dS</i>	Disable	Disabled
<i>En</i>	Enable	Enabled

<b>P-11 Function Key UP</b>	<b>Function associated to UP key (up arrow)</b>	
<i>dS</i>	Disable	Disabled
<i>Display max peak</i>	Max. registered peak visualization (reset with UP+DOWN key)	
<i>Display min peak</i>	Min. registered peak visualization (reset with UP+DOWN key)	

<b>BACKUP MEMORY CONFIGURATION</b>	<b>Power-off Memory</b>	<b>Power-off memory</b>
<i>dS</i>	Disable	No peak value stored at power-off
<i>Max Peak</i>	Max. peak stored at power-off	
<i>Min Peak</i>	Min. peak stored at power-off	
<i>All</i>	All Peak	Max. and Min. peaks stored at power-off

<b>CLOCK INPUT CONFIGURATION</b>	<b>P-14 Minimum Input Frequency</b>	<b>Minimum visualized frequency</b>
<i>0.01</i>	0.01 Hz	For lower frequency values 0 is visualized
...		on display. This parameter changes maximum display
<i>0.09</i>	0.09Hz	update time from 100 to 0.1 sec.
<i>0.1</i>	0.1 Hz	Default
...		
<i>10.0Hz</i>	10.0Hz	

<b>SFL</b>	<b>P-15 Software Filter</b>	<b>Sampling frequency software filter</b>
<i>off</i>	No software filter used for reading.	Default
<i>0.01 sec</i>	Mean realized on samplings done within the time	
...	set in this parameter. Display will be update at max.	
<i>1.00 sec</i>	with this time interval.	

<b>DISPLAY CONFIGURATION</b>	<b>P-16 Timebase</b>	<b>Visualization time base</b>
<i>sec</i>	Visualized value referred to second	Default
<i>min</i>	Visualized value referred to minute	
<i>hour</i>	Visualized value referred to hour	

<b>P-17 Pulse in Unit</b>	<b>Number of impulses on single unit. Revolution</b>	
<i>9999</i>	99.99 pulse	counter indicates how many impulses corresponds at a complete revolution.
...		
<i>0.01</i>	0.01 pulse	
<i>1</i>	1 pulse	Default
...		
<i>9999</i>	9999 pulse	

<b>P-18 Decimal Point</b>	<b>Tachometer value visualization format</b>	
<i>0</i>	No decimal digit visualization	Default
<i>0.0</i>	1 decimal digit visualization	
<i>0.00</i>	2 decimal digits visualization	
<i>0.000</i>	3 decimal digits visualization	

<b>MEASURE UNIT CONFIGURATION</b>	<b>P-19 Measure Unit 1</b>	<b>Setting digit 1 of visualized measure unit</b>
<b>P-20 Measure Unit 2</b>	<b>Setting digit 2 of visualized measure unit</b>	
<b>P-21 Measure Unit 3</b>	<b>Setting digit 3 of visualized measure unit</b>	
<b>P-22 Measure Unit 4</b>	<b>Setting digit 4 of visualized measure unit</b>	
<i>8888</i>	Edit digits	Set as chosen each of 4 digits
		Default ----

### SETPOINT CONFIGURATION

<b>P-23 Display Set 1</b>	<b>Setpoint 1 visualization selection</b>	
<i>dS</i>	Disable	Setpoint value not visualized
<i>U_Su</i>	Visualized	Setpoint value visualized
<i>Mod</i>	Modifiable	Setpoint value visualized and modifiable
<b>P-24 Lower Limit Set 1</b>	<b>Set 1 lower limit (0...9999)</b>	Default 0
<b>P-27 Upper Limit Set 2</b>	<b>Set 2 lower limit (0...9999)</b>	Default 0
<b>P-25 Upper Limit Set 1</b>	<b>Set 1 upper limit (0...9999)</b>	Default 999
<b>P-28 Upper Limit Set 2</b>	<b>Set 2 upper limit (0...9999)</b>	Default 999

### OUTPUT ENABLE CONFIGURATION

<b>P-29 Output Enable</b>	<b>Enabled outputs</b>	
<i>EnAb</i>	Always enable	Tachometer outputs always enabled
<i>Auto</i>	Automatic enable	Outputs enabled automatically
<i>inP</i>	Enable by input	Tachometer outputs enabled by digital inputs

### TACHOMETER LOGIC OUTPUT MODE CONFIGURATION

<b>P-30 Logic Output Mode1</b>	<b>Tachometer logic output 1 mode</b>	
<b>P-34 Logic Output Mode2</b>	<b>Tachometer logic output 2 mode</b>	
<i>HDU</i>	High Deviation	Output active with upward deviation
<i>LdU</i>	Low Deviation	Output active with downward deviation
<i>inSb</i>	Inside Band	Output active inside band
<i>outb</i>	Out of Band	Output active out of band

**P-31 Activation Delay 1**	**Logic output 1 activation delay**	
</tbl\_header

# TCT101-4ABC-T "TACHOMETER" MODE

